

# **The Manual of Digital Video Recorder**

# 1 Important Safeguards and Warnings

## **Electrical safety**

Installation and operation should conform to your local electrical safety codes. We assume no liability or responsibility for any fires or electrical shock caused by improper handling or installation.

## **Transportation security**

Heavy stress, violent vibration or water splash should be avoided during transportation, storage and installation.

## **Installation**

Keep upright. Handle with care.

Do not apply power to the NVR before completing installation.

Do not place objects on top of the NVR

## **Qualified engineers needed**

All examination and repair work should be done by qualified service engineers.

We are not liable for any problems caused by unauthorized modifications or attempted repair.

## **Environment**

The NVR should be installed in a cool, dry place away from direct sunlight and inflammable or explosive substances, etc.

This product should be transported, stored and operated in the specified environments.

## **Accessories**

Be sure to use all the accessories available in the package.

Before installation, please open the package and check all the components are included.

Contact your local retailer if something is broken or missing in your package.

## **Lithium battery**

Improper battery use may result in fire, explosion, or personal injury.

When replacing the battery, please make sure you use the same model.

## **2 Declaration**

Please prevail in kind. The manual is for reference only.

This manual may contain inaccurate data or printing error.

The products described in this manual may be updated at any time.

Screenshots of the manual is not in a machine and only for display.

If in doubt, obtaining a copy of the latest procedure or the additional document, please contact with the company's after-sales department.

## TABLE OF CONTENTS

1 Important Safeguards and Warnings .....	2
2 Declaration .....	3
3 Product Introduction.....	1
3.1 Product Overview.....	1
3.2 Feature.....	1
4 Read First .....	2
4.1 Front Panel .....	2
4.2 Remote Control .....	4
4.3 The Mouse.....	6
4.4 The Input Method.....	7
4.5 Icon.....	7
4.5.1 The Screen Icons.....	7
4.5.2 Operation Icons .....	8
5 Installation .....	8
5.1 Unpacking Inspection.....	8
5.2 HDD Installation .....	8
5.3 Installation of the burner .....	9
5.4 Alarm/PTZ/Control Keyboard Interface .....	9
5.5 POE Connection.....	11
6 Basic Operations Guide .....	12
6.1 Power On and Off .....	12
6.1.1 Power On.....	12
6.1.2 Power Off (Shutdown) .....	12
6.1.3 Restart .....	12
6.1.4 Power recovery .....	13
6.2 Start-up Wizard .....	13
6.3 Add Camera .....	15
6.3.1 Channel Mode Switch .....	15
6.3.2 QUICK ADD IP CAMERA .....	16
6.3.3 IP Channel Management.....	18
6.3.4 Add IP Cameras .....	19
6.3.5 Modify channel configuration .....	19
6.3.6 Configure Front Device.....	20
6.3.7 Delete Front-end Device.....	25
6.3.8 Advanced Setting.....	25
6.4 The Event of Configuration.....	26
6.4.1 Video Detection Configuration .....	26
6.4.2 Intelligent Analysis .....	27
6.4.3 Alarm Configuration .....	30

6.4.4Abnormal Alarm .....	32
6.5Log in/Log out.....	33
6.6Preview.....	33
6.6.1Live Preview.....	33
6.6.2Channel Toolbar .....	35
6.6.3Right Click Menu .....	35
6.6.4Task Bar .....	39
6.7Search.....	42
6.7.1Search.....	42
6.7.2Event Search .....	45
6.7.3Tag Search.....	46
6.7.4Smart Search .....	46
6.7.5External Search.....	48
6.7.6Face search.....	49
6.8Record Backup.....	50
7 Local Configuration .....	51
7.1The Introduction of The Main Menu.....	51
7.2INFO .....	52
7.2.1System .....	52
7.2.2Event.....	53
7.2.3Net Information.....	54
7.2.4LOG .....	55
7.3CONFIG.....	56
7.3.1Channel Setting .....	56
7.3.2Network.....	59
7.3.3Event.....	66
7.3.4Storage .....	66
7.3.5System Configuration .....	70
7.3.6APP Center .....	76
8 WEB Access .....	80
8.1 WEB Operation.....	80
8.1.1Network Connection .....	80
8.1.2The control installation and the user login logout .....	81
8.1.3The Interface of Web Operations .....	82
8.1.4Configuration.....	86
8.1.5Search Record.....	86
8.1.6Alarm Configuration .....	87
9 Appendix .....	89
9.1 Alarm linkage setting .....	89
9.1.1Alarm Out .....	89
9.1.2Linkage Record .....	89
9.1.3Snapshot.....	90
9.1.4PTZ Linkage.....	90
9.1.5Tour .....	90

9.1.6Show Message.....	90
9.1.7Buzzer .....	91
9.1.8Send Email.....	91
9.1.9Server Push.....	92
9.1.10 Send NetDisk.....	92
9.2Port Mapping.....	93
9.2.1UPNP Function .....	93
9.2.2Port mapping Manually .....	94
9.3Voice Intercom .....	95
9.3.1Summarize.....	95
9.3.2Configuration.....	95
9.4HDD S.M.A.R.T .....	95
9.5Hard disk problem.....	97
9.6HDD Capacity Calculation.....	99
9.7Terms .....	100
9.8FAQ .....	101

# 3 Product Introduction

## 3.1 Product Overview

This series DVR/NVR is a high performance network video recorder, combined with H.264 video compression, high-capacity hard disk storage, TCP / IP transmission, embedded Linux operating system and a variety of other advanced technologies in the electronic information industry, all those ensure that a high-quality, low bit rate video storage characteristics, and good system stability.

This product complies with GB 20815-2006 standard video security surveillance digital video recording promulgated by the State. At the same time, the product supports the ONVIF protocol” base on’ ONVIF™ Core Specification’ Version 2.2” and is compatible with the network cameras which supports ONVIF protocol.

Some of the products can enable the switching between the NVR mode and Hybrid mode “Hybrid mode supports both analog cameras and network cameras, NVR mode only supports network cameras”. This series product support local preview, multiple-window display, recorded file local storage, remote control and mouse shortcut menu operation, and remote management and control function. recording, playback, monitoring, synchronization of audio and video. Besides, the products support advanced control technology and strong network data transmission capacity.

## 3.2 Feature

### **Real-time monitoring**

Have a composite video signal interface and support TV, VGA or HDMI output simultaneously.

### **Compression function**

Use H.264 video compression standard and G.711 audio compression standard and have high definition, low code rate of the video coding and the storage.

### **Recording function**

Support timing, linkage alarm, motion detection, SATA hard and local hard disk , DVR data backup and network backup.

### **Video playback function**

Achieve searching videos by a variety of conditions, playback in local and network. Support multiple videos

playback, fast playing, slow playing and frame-by-frame playback. Video playback can display the exact time of the incident. Provide time-line retrieving page for quick searching.

#### **Camera control and alarm**

Be controlled by the remote camera and equip many alarm input interfaces. Be connected to various types of alarm devices. Dynamic detection, video loss, video block, multiple alarm output and scene lighting control can be realized.

#### **Communication Interface**

Equip USB 2.0 high-speed interface or ESATA interface and allow many backup devices. Equip standard Ethernet interface. Plug and play in a variety of network conditions,

#### **Network functions**

Support TCP / IP, UDP, RTP / RTSP, DHCP, PPPOE, DDNS, NTP P2P etc. Support real-time network monitoring, video playback, control and management functions; built-in WEB Server, you can directly access through a browser.

#### **Operation Mode**

Support various shortcut menu operation modes, on the front panel, remote control, mouse, etc.; Support simple and intuitive GUI.

#### **Intelligent analysis**

Support One or Two channel Intelligent Video Analysis,, such as Face detection and perimeter analysis, Intelligent linkage pictures storage, videos, external alarm

#### **Intelligent Search**

Data can be retrieved through the intelligent analysis of data. Such as face detection data to achieve through face image search, or by perimeter realization event video analysis data retrieval.

#### **Channel Switch**

The simulating device compatible with IP channel by the TVR channel switch.

## **4 Read First**


### **4.1 Front Panel**

No	Name	Icon	Function
----	------	------	----------

1	Power	Power	Power button, press this button to boot up or shut down DVR/NVR.
2	Shift	Shift	1. In input Box, switch input methods; 2. Switch TAB;
3	Number Key	1~9	1. Number Input(in number mode); 2. English character Input(in English mode); 3. Switch channel (in 1-ch mode).
4	Input number more than 10	+10	Enter a digital larger than 10, press two-digit number: 1. Press the tens digit; 2. Press digital switch button; 3. Press ones digit.
5	Up/Down	↑↓	1.Assistant function such as PTZ menu; 2.In monitor mode, switch between multiple-window and one-window; 3. Activate the digital input box increase or decrease the number; 4.Active pull-down menu to switch the drop-down box options; 5. Activate checkbox to change status; 6. Activate the text input box and step down carry and abdication; 7. Activate the control box to move the slider; 8. Activate display window to select the previous channel, next channel.
6	Left/Right	←→	1. Shift current activated control, and then move left and right; 2. In monitor mode, switch channel.
7	ESC	ESC	Go to previous menu, or cancel current operation.
8	Enter	ENTER	1. Confirm current operation; 2. Go to OK button; 3. Go to menu.
9	Function Key		Shortcut function with FN key.
10	Auxiliary	Fn	1. One-window monitor mode, click this button to display assistant function: PTZ control and image color; 2. Detection areas setting(like in motion detection setup), working with Fn and direction keys to realize setup; 3. In text mode, click it to delete the character before the caret(if there is no shift on the front panel, it can switch input methods), press this button for 1.5sec to clear all of the characters; 4. In playback mode, switch the full screen; 5. Realize other special functions.
11	Play/Pause	▶	1. Go to SEARCH interface; 2. In PTZ channel: ZOOM+; 3. In normal playback click this button to pause playback; 4. In pause mode, click this button to resume playback.
12	Shuttle(outer ring)		In real-time monitor mode it works as left/right direction key.
13	Jog(inner dial)		In real-time monitor mode it works as up/down direction key.

# 4.2 Remote Control

The remote control interface is shown as below:

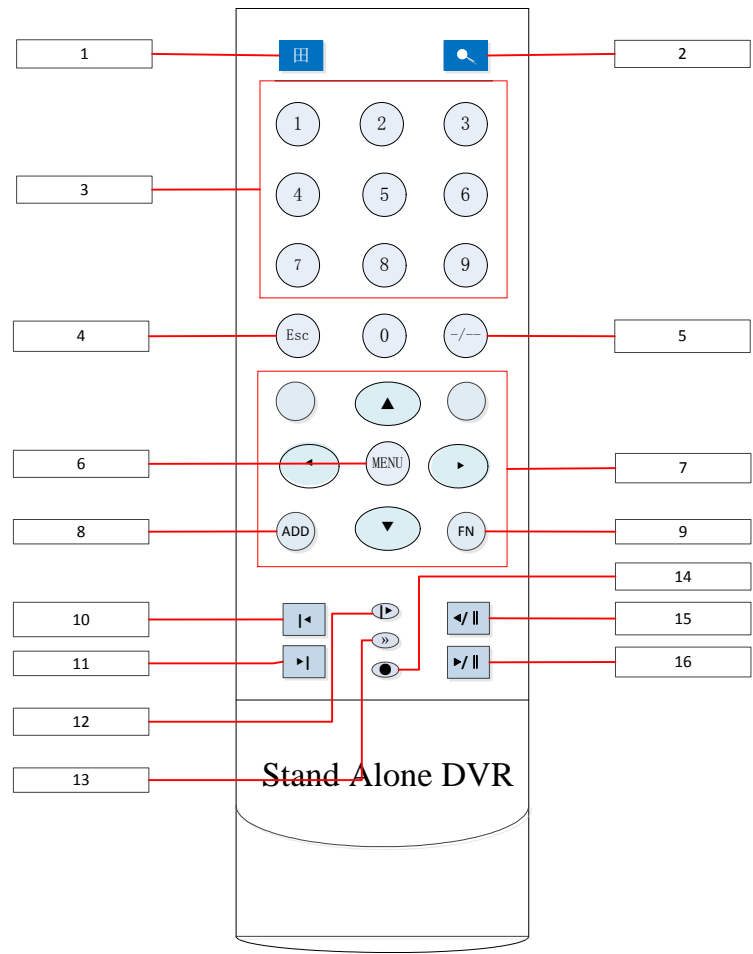

No.	Icon	Name	Description
1	田	Multiple-Window Switch	Switch between multiple-window and one-window.
2		Search	Access into the recording search menu.
3	1--9	Number Key	1. Input numbers (in number mode) 2. Input English character (in English mode) 3. Switch channel (one-window mode) 4. Input the password.
4	Esc	ESC	1. Go to previous menu 2. Cancel current operation.
5	-/--	Digital Switch	Enter a digital larger than 10, press two-digit number: 1. Press the tens digit; 2. Press digital switch button; 3. Press ones digit.
6	MENU	Confirm/Menu Key	1. Confirm current operation; 2. Go to OK button; 3. Go to menu.

7	▲	Up	1.Assistant function such as PTZ menu; 2.In monitor mode, switch between multiple-window and one-window; 3. Activate the digital input box increase or decrease the number; 4.Active pull-down menu to switch the drop-down box options;
	▼	Down	5. Activate checkbox to change status; 6. Activate the text input box and step down carry and abdication; 7. Activate the control box to move the slider; 8. Activate display window to select the previous channel, next channel.
	◀	Left	1. Shift current activated control, and then move left and right; 2. In monitor mode, switch channel;
	▶	Right	3. Assistant function such as PTZ menu.
8	ADD	Remote Address	Click it to input device number, so that you can control it.
9	FN	Auxiliary Key	1. One-window monitor mode, click this button to display assistant function: PTZ control and image color; 2. Detection areas setting(like in motion detection setup), working with Fn and direction keys to realize setup; 3. In text mode, click it to delete the character before the caret(if there is no shift on the front panel, it can switch input methods), press this button for 1.5sec to clear all of the characters; 4. In playback mode, switch the full screen; 5. Realize other special functions.
10	◀	Previous record/ Iris-	1. In playback mode, playback the previous video; 2. In PTZ mode, Iris-.
11	▶	Next record/Iris+	1.In playback mode, playback the next video; 2. In PTZ mode, Iris+.
12	▶	Next Frame	Playback the next frame (frame by frame)
13	»	Fast Playback	Various forward speeds and normal speed playback.
14	●	Stop	In normal playback click this button to stop playback.
15	◀/I	Reverse/Pause	1. In normal playback click this button to pause playback; 2. In pause mode, click this button to reverse playback.
16	▶/I	Play/Pause	1. In normal playback click this button to pause playback; 2. In pause mode, click this button to resume playback.

The procedures of controlling multiple DVR by remote control:

The DVR ID default is 8. It's no need to reset it when control one single DVR by the remote control. If you need to control multiple DVR, do as below:

First activate the remote control: choose controlled DVR, starts successfully, aim the remote control to control the hard disk video recorder, press the "Add" button, input device ID) between (1-999), then press ENTER to determine can control the corresponding number of hard disk video recorder.

## 4.3 The Mouse

In addition to front panel keys and remote control menu, the user can use a to control. Insert the mouse interface into the USB interface.

### **Left Click**

Left click to enter the right menu or the main interface.

Left click to access the menu option.

Perform the operations instructions of the control.

Change the state of the checkbox or dynamic detection blocks.

Pop up a drop-down list when left click.

In the state of PTZ 3D control, left drag the area to achieve regional enlarging or reducing. See details zoom effect

4.1.2 PTZ control section introduction.

### **Double Click**

Double click to play video.

Double click to make the screen full or exit.

### **Right Click**

Right click to pop up the right menu in the real-time monitoring screen.

Exit the current interface without saving.

### **Turning Wheel**

Turn the mouse wheel to change the value in the digital box.

Switch the option of the combination box.

Scroll back and forth to achieve the zoom function of channels and PTZ 3D.

### **Mouse Move**

Select controls of the current coordinates to move.

### **Mouse Drag**

Select area to detect.

Select area to shelter.

Select zooming function of PTZ control.


## 4.4 The Input Method

capitalization and the input of Chinese. Click the mouse to complete the input.”← “represents the backspace and “\_” represents a space.


**In the input box, you can select figures, symbols, English The input interface of English:**



**figures:**

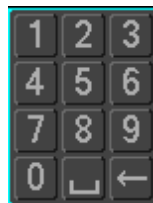


**The input interface of Chinese:**

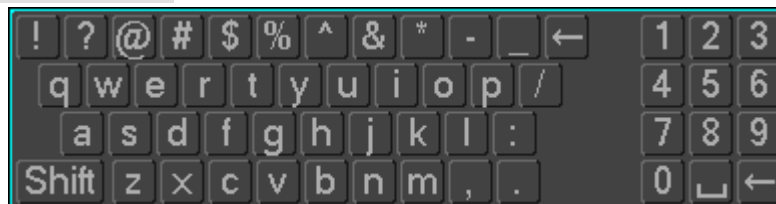


## 4.5 Icon


### 4.5.1 The Screen Icons


 : The channel is recording.

 : The video of the channel is lost.

 : Motion detection occurs.

 : The channel is in monitoring and locked status.

 : Adjust the size of the logo of the local audio output.

 : Allow screens to round of the Tour.

## 4.5.2 Operation Icons



: Not selected.



: Be selected.



: The drop - down button



: Leave the interface.



: Cancel the settings.



: Set parameters.



: Save parameters.



: Restore the factory settings.



: Apply current settings to the system.



: Copy current settings to other channels.



: Enter the configuration interface.



: Select and configure the processing operation triggered by video detection or alarm.

# 5 Installation

## 5.1 Unpacking Inspection

When you receive the product, check according to the packing list in the box.

## 5.2 HDD Installation

### Installation Preparation

Prepare a Cross Screwdriver.



*Note: HDD quantity by each model's specifications shall be final, HDD capacity up to 64 TB.*

### Steps

Remove the metal top cover by removing two screws from the sides of the cover.

Place the hard disks on a flat table and tighten the screws.

Connect the power and the data lines to the HDD.

Reinstall the metal top cover and tighten the screws.

### Caution

Only use the HDD specified by the manufacturer.

The HDD will be formatted automatically during booting and it may cause data loss.

The total duration of video data saved is decided by the HDD's capability and the DVR's parameters (recording setup, encoding setup). Please refer to the form in chapter 11.5.

## 5.3 Installation of the burner

### Installation Preparation

Prepare a Cross Screwdriver.

### Steps

Unscrew the screw on the side of the chassis and open the case cover.

Use a screwdriver to remove the bracket fixed in middle of the disk.

Open the front panel door and remove the baffle inside.

Connect the burner data cable and the power cord.


Fix the chassis cover.

### Caution

The installation of the built-in burner is only for specific DVR and affects disk space for installation and interfaces.

## 5.4 Alarm/PTZ/Control Keyboard Interface

### Alarm/PTZ/Control Keyboard Interface

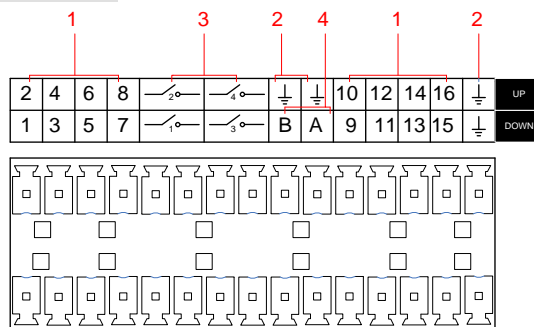

No	Name	Instructions
1	Alarm Input	Connect the positive end (+) of the alarm input device to the


		alarm input port (ALARM IN 1~16)
2	GND	Connect the negative end (-) of the alarm input device to the ground
3	Alarm Output	Connect the alarm device
4	RS-485	485 communication port. They are used to control devices such as PTZ. Please parallel connect 120TΩ between A/B cables if there are too many PTZ decoders



- Different models support different alarm input ports. Please refer to the specifications sheet for detailed information.
- Slight difference may be found on the alarm port layout.


### Examples of alarm input connections

The alarm input is the switch quantity input. If the alarm input signal is not switch quantity signal but voltage signal, refer to the following connection:

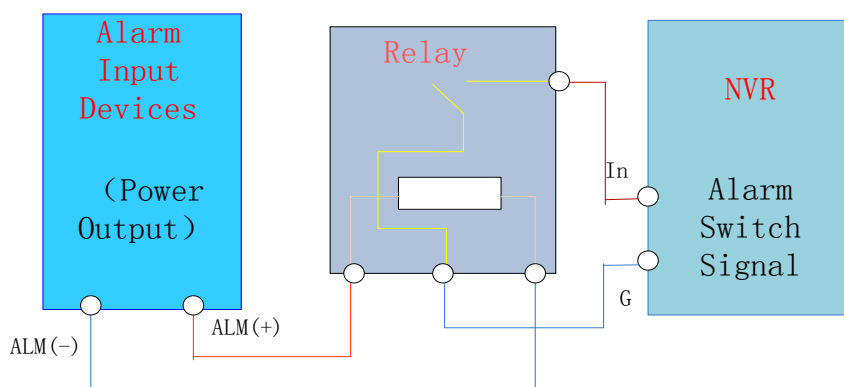

### Examples of alarm output connections

When the alarm output connect with DC and AC load, please refer to the connection.

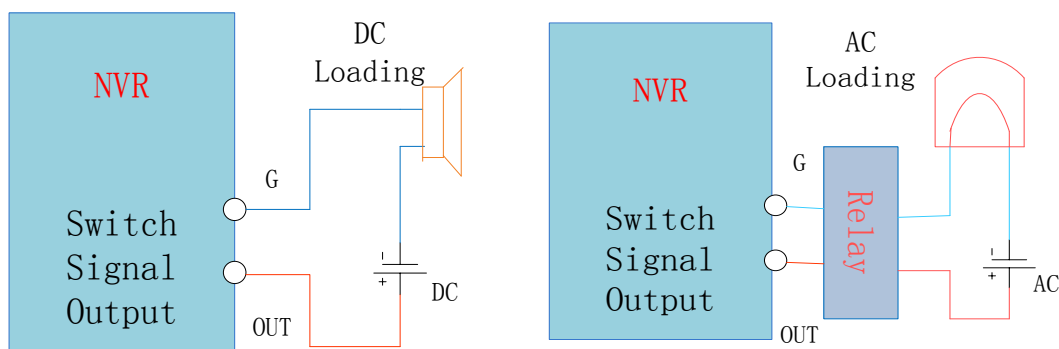

See details 7.2.5.


### The Connection of the P/T/Z

The A, B interface of the PTZ decoder connect with A and B interfaces of the DVR's RS-485. 120Ω resistors should be paralleled in the remote A, B lines to reduce the distortion of the signal if a larger number of PTZs are connected.


See details 7.2.4.

## Keyboard

The A, B interface of the Keyboard connect with A and B interfaces of the DVR's RS-485,[MAIN MENU]-[CONFIGURATION]-[P/T/Z], Protocol choose KEYBORAD. See below.

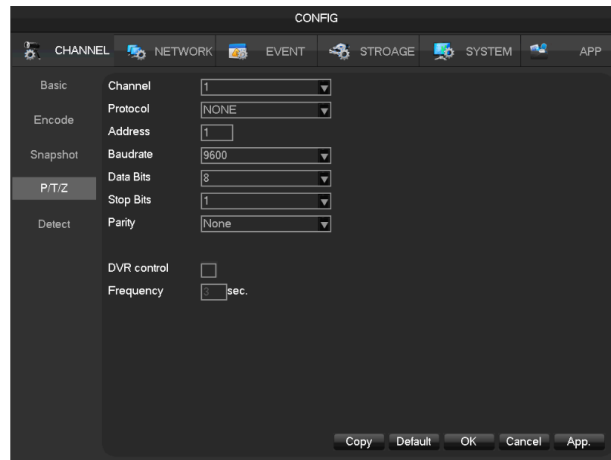

## 5.5 POE Connection

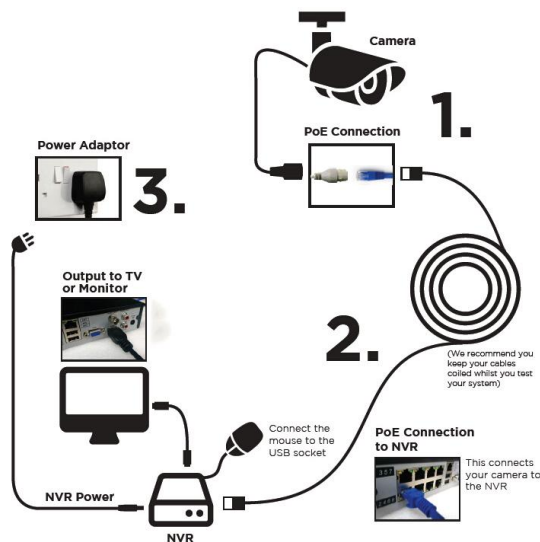

- Non-safe voltage 48V, please pay attention to electrical safety. Supply the NVR with the 12V DC power.
- IP Camera should support the POE.
- The theoretical distance of POE power supply should below 100 meters.

# 6 Basic Operations Guide


## 6.1 Power On and Off

### 6.1.1 Power On

Install the DVR/NVR correctly (as above) and then connect the power. The DVR/NVR LED should light up and the DVR/NVR will boot automatically.

The DVR/NVR will then automatically detect any connected hardware (cameras, monitors, etc.), this process should last about 30 Seconds. When this process has been completed the DVR/NVR will enter the multi-screen real-time surveillance mode.


If your hard drive is not properly connected, the following message will appear on your screen.

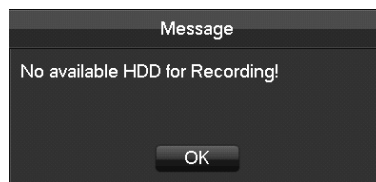

*Note: Please do not use any type of power supply which is different from the power supply included in this kit.*

### 6.1.2 Power Off (Shutdown)

Right mouse click -[Main Menu]-[Shutdown]

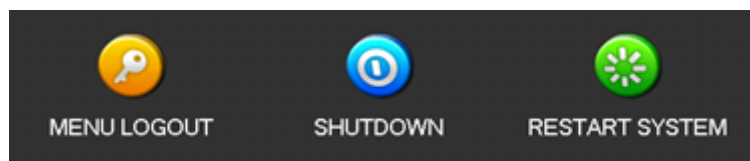

*Note: Only change or attempt to reconnect the hard disk drive after shutting down the DVR/NVR.*

### 6.1.3 Restart

Right mouse click -[Main Menu]-[Shutdown]-[Restart system]

## 6.1.4 Power recovery

Reboot after an outage or forceful shutdown, DVR will save the record before outage and return to the normal operation mode.

## 6.2 Start-up Wizard

Quick configuration includes P2P account & password setting, network configuration, intelligent mode selection.

### Help Information

The image shows the 'Startup Wizard' interface with three steps: STEP 1 HELP, STEP 2 NET, and STEP 3 USER. STEP 1 HELP is active and shows the website 'www.campro-cctv.com.cn', an Internet Explorer icon, and a QR code. STEP 2 NET shows an Android icon, a QR code, and the text 'Android Campro view'. STEP 3 USER shows an Apple icon, a QR code, and the text 'iPhone Campro view'. Below the steps, there is a message 'More help please visit: www.campro-cctv.com.cn'. A network status bar shows a router icon, a red 'X', a globe icon, another red 'X', and a cloud icon with a refresh symbol. At the bottom, there are input fields for 'User Name' (set to 'admin') and 'Password'. There is a checkbox for 'Activate when reboot' which is checked, and a 'Next Step' button.

[QR code] From left to right: Web access address, Android APP address, iPhone APP address.

[Network Connection Status] The current network status.

[Log In Account] The login account and password, with the correct account and password can enter the menu.

Default account is admin, and password is 123456.

[Start-up wizard] Activate or not when reboot.

### Network configuration

Startup Wizard

STEP 1 HELP    STEP 2 NET    STEP 3 USER

DHCP ☐

IP Address 10 . 12 . 4 . 39

Subnet Mask 255 . 255 . 255 . 0

Gateway 10 . 12 . 4 . 1

AUTO DNS ☐

DNS1 8 . 8 . 8 . 8

DNS2 192 . 168 . 1 . 1

P2P Account Info

P2P ID 0020a5e2 Password DAm4bY

☒ Activate when reboot

Save Previous Next Step

**[DHCP]** Tick DHCP Enable. Once enable the DHCP, IP address, gateway and subnet mask will get automatically, can't be set.

**[IP address]** Enter the number or press up & down button ( $\pi\theta$ ) to change the IP address and **[Subnet Mask]** and **[Gateway]**.

**[AUTO DNS]** Enable the **[AUTO DNS]**, DVR will get the DNS from the DNS server, no need to set.

**[DNS 1]** DNS server IP.

**[DNS 2]** DNS alternate IP.

**[P2P Account Info]** Scan it and shows P2P account, login with mobile APP.

**[P2P Account]** Display the current P2P account and password.

## Account

Startup Wizard

STEP 1 HELP    STEP 2 NET    STEP 3 USER

	User	Group	Status
1	admin	admin	Normal
2	user	user	Normal
3	default	user	Default User

Add User

Modify User

Add Group

Modify Group

Modify Password

☒ Activate when reboot

Save Previous Next Step

**[Add Users]** Add a new user.


**[Modify User]** Modify the user name, groups, authorities.

**[Add Group]** To add a user group, and configure the user group right.


**[Modify Group]** Modify the permissions belong to Group

[Modify Password] Modify the Login password

Intelligent mode selection

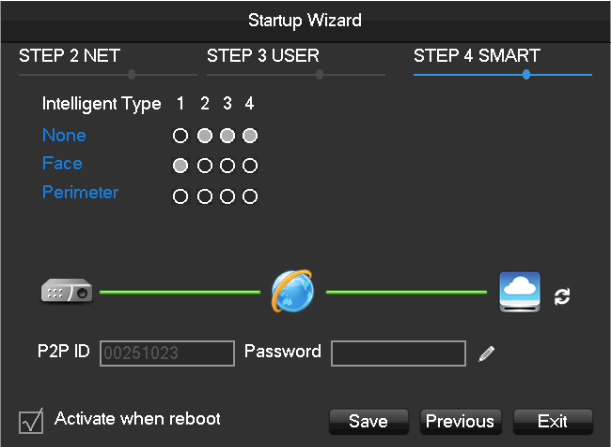

[Intelligent mode selection] Intelligent mode selection.


 Feature is only available on certain devices. In this section showing the device's menu system may differ to menu system on the device you are using.

6.3 Add Camera

6.3.1 Mode Switch

To TVR, compatible local channels with net channels by the channel mode switch.

[Main Menu]- [Channel]-[Mode Switch] to switch the channel mode.

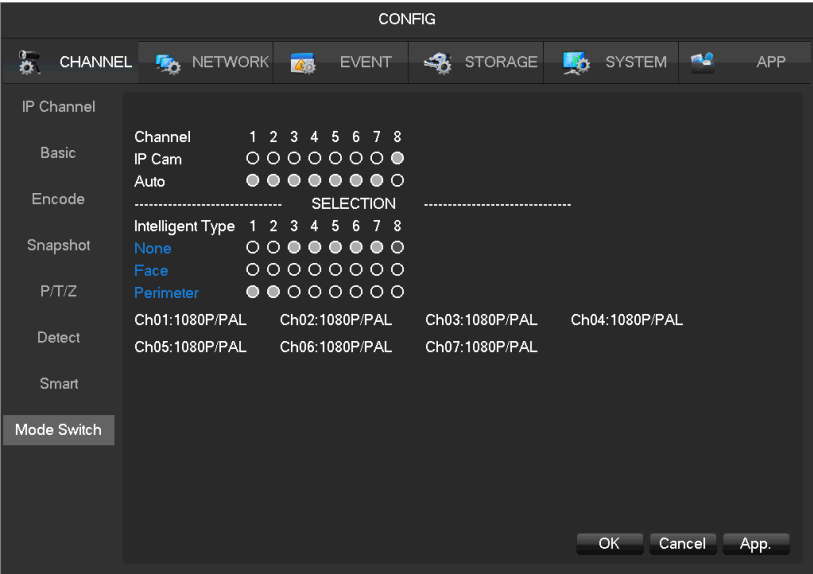


**[IP Cam]** IP mode, can connect IP camera into the current channel.

**[Auto]** Local channel mode, identify the video standard and resolution automatically.

The default will display the biggest input capacity, the format is “channel No.: resolution/video standard” and will real-time display the current resolution.

The preview screen will display the resolution and video standard once the camera is connected, the format is “resolution/video standard”, and the display time is 3sec.

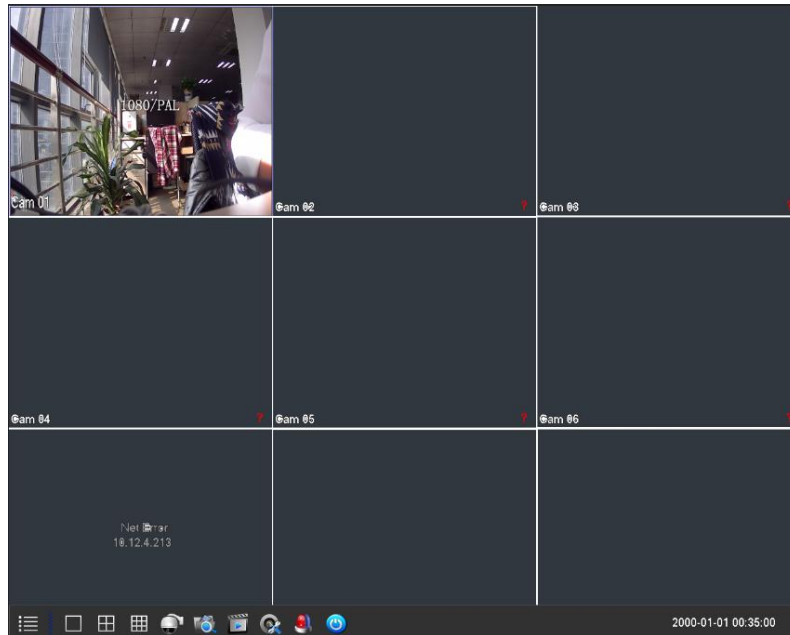


Due to the hardware differences, device will prompt wrong information once the connected signal is not supported.



*There are differences to the automatic identify feature supporting to the different models. In this section showing the device's menu system may differ to menu system on the device you are using.*

## 6.3.2 QUICK ADD IP CAMERA

In preview screen, move the mouse to the network channel, it will show "+" sign, left-click to enter the following menu:

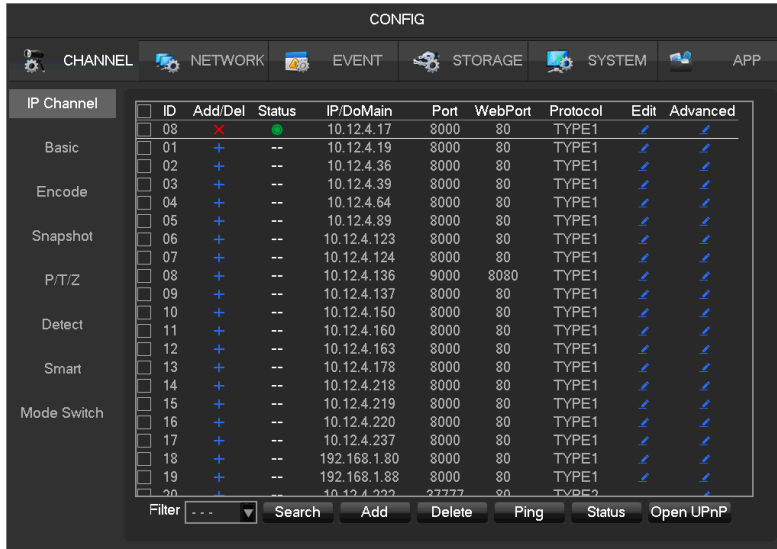

### Search add

Click [Filter] to select the protocol;

Click [Search] to search devices;

Click "+" to add device.

### Manual add

Channel Set

Channels: 3 - NET

Protocol Type: TYPE 1

IP/DoMain:

TcpPort: 8000

UserName:

Password:

Remote Detect: Detect

Remote Channel: 1

Copy OK Cancel App.

**[Channels]** Choose one channel.

**[Protocol]** Choose protocol supported by the device.

**[IP/ Domain Name]** Input front device IP address or domain name.

**[Port]** Input front device TCP port.

**[Username]** Input front device username.

**[Password]** Input front device password.

**[Remote Detect]** After completing the above settings, click detect button to check connection status.

[Ping] Check whether the current network is to be connected.



[Remote Channel] When the front device includes multiple channels, choose one channel for it.

Click “App” button to finish.


### 6.3.3 IP Channel Management

If the device support IP channel can use IP channel management page for add or delete IP devices and set the front-end configuration.

There are three ways to log in [IP Channel]

- 1、Living preview, click the button  in the menu bar.
- 2、Right click the mouse on the living preview, click the button  IP Channel in the right-click menu.
- 3、[Main Menu]-[Channel]-[ IP Channel]

IP channel management menu as the following page:

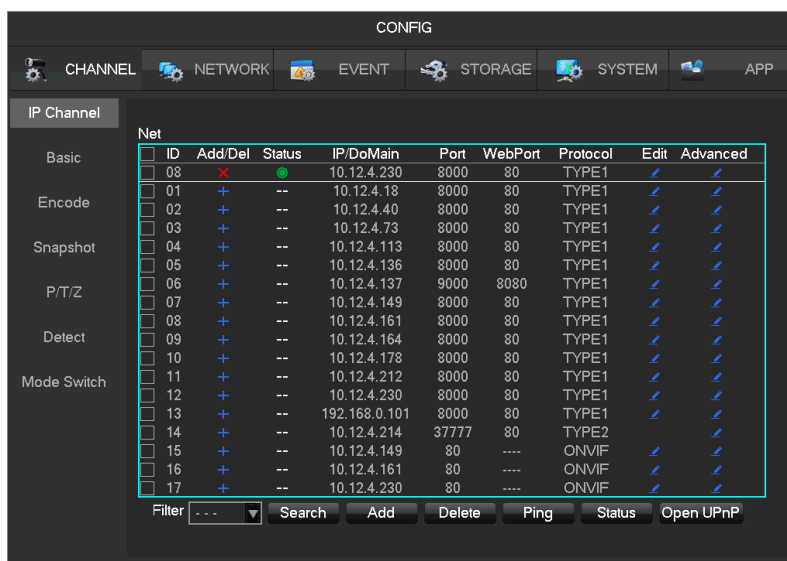

[Check Box] Click the check channel, double click can deselect channel, Click the title bar to achieve selection, double click can deselect all.

[Serial Number] Display the network channel number to add equipment serial number.

[Add、Delete] Click  Delete the current network equipment. Click  add the network equipment.

[Status] Show the current channel connection status:  Connection is normal,  ID or Password is wrong,  the equipment is offline,  User is lock.

**[IP Address/Domain Name]** Display the equipment's IP address/domain name.

**[Port]** Display the port number

**[Web Port]** Display the web port number.

**[Agreement]** Display the connection agreement.

**[Edit]** Configure the channel information, show in 6.3.6.

**[The Front-end Configuration]** Configure the camera's parameters.

## 6.3.4 Add IP Cameras

There are three ways to add IPCs.

### Automatically Add

No configuration, the device is automatically added.

Click **[Open UPNP]** in **[IP Channel Management]** menu page.



*Note: The device should support UPNP and should be in the same LAN.*

### Searching Add

Search all the IPCs in the network environment and then choose one or mass to add. To do the following steps in **[IP Channel Management]** menu page:

Click **[Filter]** to select the protocol;

Click **[Search]** to search devices;

Click + to add device or Right click **[Add to]** to choose the channel you want or tick the devices you want to add, then click **[Group Add]**.



*Need to update the password by manually after connecting the camera.*

### Manual Add

The details see 6.3.2, manual add.

## 6.3.5 Modify channel configuration

Click "Edit" button in the IP Channel list.

Modify the information table, the table details see 6.3.2

## 6.3.6 Configure Front Device

Basic configuration, encoding configuration, snapshot, network and motion detection of front device can be set in NVR.

Click “Front Setting” button of device in **[IP Channel Management]** menu.

### BASIC

The screenshot shows a configuration window titled "Front Set" with a dark background. At the top, there are seven tabs: "Basic", "Encoding", "Snapshot", "NetWork", "Detection", "Account", and "Color Setting". The "Basic" tab is currently selected. Below the tabs, there are several configuration fields:

- Channels Choose:** A dropdown menu showing "8 - NET".
- IPC Channel Name:** A text input field containing "IPC".
- IPC Current Time:** A time selection field showing "2016 - 09 - 07 15 : 23 : 22".
- IPC Time Zone:** A dropdown menu showing "GMT+08:00".
- Syn With NVR Time:** A checkbox that is checked.
- IPC Control:** A button labeled "Reboot IPC".

At the bottom right of the window, there are four buttons: "Refresh", "OK", "Cancel", and "App.".

**[Channel Choose]** Choose a channel.

**[Channel Name]** Modify current channel name.

**[IPC Current Time]** Set IPC time.

**[Time Zone]** Set time zone.

**[Time Sync]** Enable IPC time sync with NVR.

**[Control IPC]** Click the prompt whether restart the IPC, **[OK]**Restart the IPC, **[Cancel]**Return.

### Encoding

**Front Set**

Basic   **Encoding**   Snapshot   NetWork   Detection   Account   Color Setting

Channels Choose	8 - NET ▼	
Audio Encode	G711A ▼	
	Main Stream	Sub Stream1 ▼
Compression	H.264 ▼	MJPEG ▼
Code Level	HP ▼	▼
Resolution	HD960 ▼	D1 ▼
Frame Rate(FPS)	30 ▼	17 ▼
Bit Rate Control	VBR ▼	CBR ▼
Quality	Normal ▼	Normal ▼
I frame interval	60	34
Bit Rate(Kb/S)	1024 ▼	2048 ▼

Refresh   OK   Cancel   App.

**[Channels Choose]** Choose one channel.

**[Audio coding]** Select the current audio encoding

**[Code Level]** H.264

**[Resolution]** Choose main resolution and sub resolution.

**[Frame Rate]** 1~25FPS/PAL, 1~30FPS/NTSC

**[Bit Rate Control]** Choose CBR or VBR. When choose CBR, bit rate can be set. When choose VBR, image quality can be set.

**[Picture Quality]** Choose the picture quality by the Variable stream, there are 6 range to choose.

**[I frame interval]** Set interval of adjacent frames. Max is 150.

**[Bit Rate]** Choose 1280,1536,1792,2048,3072,4096,5120,6144,7168,8192 or set by yourself.



*The range of resolution and frame rate subject to the actual device.*

## Snapshot

Front Set

Basic Encoding **Snapshot** NetWork Detection Account Color Setting

Channels Choose 8 - NET

Mode Timing ☐

Image Size HD960

Image Quality Normal

Snapshot Frequency 2 SPL

Refresh OK Cancel App.

**[Choose Channel]** Choose the channel to be modified.

**[Snapshot Mode]** Support two modes: trigger snapshot and timing snapshot, the timing snapshot must tick the checkbox.

**[Picture Resolution]** Set the captured picture resolution.

**[Picture Quality]** Choose the picture quality, there are 6 range to choose.

**[The Frequency Of Highest Snapshot]** Support 1sec./pcs.~8sec./pcs 8 ranges of snapshot to choose.

## Network

Front Set

Basic Encoding Snapshot **NetWork** Detection Account Color Setting

Channels Choose 8 - NET

Get the address successfully ☐

DHCP ☐

IP Version IPV4

IP Address 10 . 12 . 4 . 230

Subnet Mask 255 . 255 . 255 . 0

Gateway 10 . 12 . 4 . 1

First DNS Server 8 . 8 . 8 . 8

Alternate DNS Server 8 . 8 . 8 . 8

MAC/Serial e0:61:b2:01:09:57

Refresh OK Cancel App.

**[Channels Choose]** Choose one channel.

**[DHCP]** Automatic get the IP address.

**[IP Version]** Choose the internet protocol version, IPV4 /IPV6.


[IP Address][Subnet Mask][Gateway] Set IP address, subnet mark and gateway for the device.

[First DNS Server] Set DNS server IP address.

[Alternate DNS Server] Set standby DNS server IP address.

[MAC/Serial] Show MAC address of front device.

## Detection

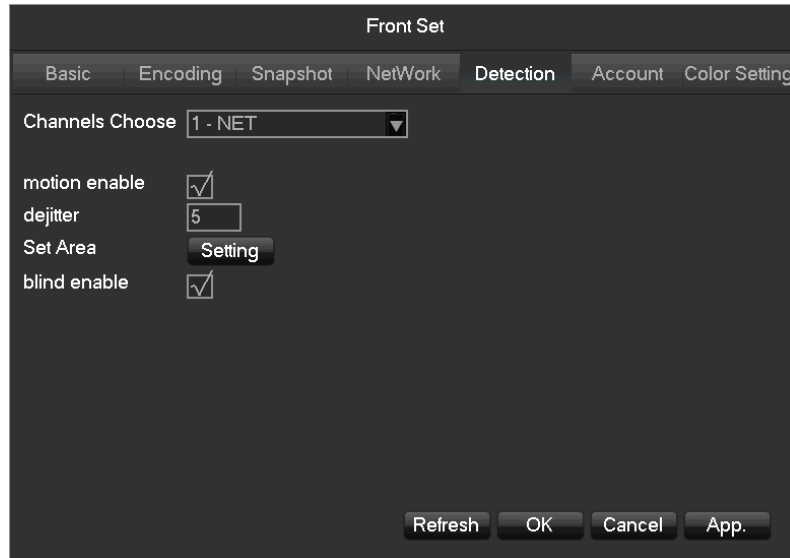


[Channels Choose] Choose one channel.

[Motion Enable] Enable the motion detection alarm or not.

[Dejitter] Only record one alarm event in this time, the default is 5sec.

[Set Area] Set the motion detection area. There are 396 (22\*18) regions can be set.

There are 6 sensitivity levels for motion detection.

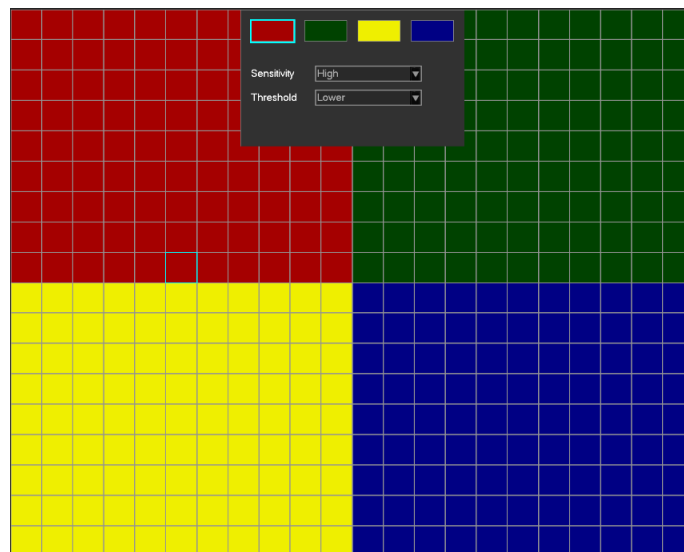



The network protocol selected when connecting the IPC must supporting to configurate this feature. All the settings are for front device.

**[Blind Enable]** Enable the blind detection alarm or not.

## Account

To get the IPC's account list.

1	User	Group	Status
1	admin	admin	

Modify Password

Refresh OK Cancel App.



If the current account is administrator will get the whole account list, or can't get the other accounts information.

## Color Setting

Channels Choose 7 - NET

configfile manage always

always use day configuration

image params image set

Refresh OK Cancel App.

**[Channels Choose]** Select channel to modify.

**[Config File Manage]** Support three modes, always, common, time.

[Always Use] Support two modes, day configuration and night configuration.

[Image Params] Get and modify the front device’s image params.

image configuration

configuration file

Day

Image

Brightness

62

Contrast

62

Saturation

62

Hue

50

ImageMode

TransparentMode

ColorMode

StandardMode

DayNight

DayNightColor

Auto

SmartIrMode

SmartIrLevel

0

DSmartIrNearLevel

0

DSmartIrFarLevel

0

Exposure

ExposureMode

HighLight

Compensation

32

ExposureSpeed

1/25

Gain

Low

Backlight

Close

AntiFlicker

Outdoor

Matrix

Mirror

Close

Rotate90

Normal

Enhancement

EEMode

Auto

EEModeValue

0

NFMode

Auto

NFModeValue

0

TridimDenoise

Auto

TridimEstimation

Low

WideDynamicRange

DigitalWideDynamic

WideDynamicRangeValue

0

Delog

Close

Refresh

OK


Cancel

App.



Subject to the front-end device model, the menu may differ the current menu in you own.

### 6.3.7 Delete Front-end Device

Click button  to delete the device in [IP Channel Management] menu.

Checkmark several devices and click “Batch Delete” to batch delete devices.

### 6.3.8 Advanced Setting

Click the advanced setting button, will show the Advanced Setting menu.

CONFIG

CHANNEL

NETWORK

EVENT

STORAGE

SYSTEM


APP

IP Channel


Basic

Encode

Net

ID	Add/Del	Status	IP/DoMain	Port	WebPort	Protocol	Edit	Advanced
07			e0:61:b2:28:9b:c2	8000	----	TYPE1		
08			10.12.4.230	8000	80	TYPE1		
01		--	10.12.4.18	8000	80	TYPE1		
02		--	10.12.4.40	8000	80	TYPE1		

The front-end device has been added into IP channel:

A dark gray rectangular menu with white text. The text is arranged vertically: "Front Set", "Automatic Detection", "ShortCut PING", "Alarm Output", and "Channel exchange" followed by a right-pointing arrow.

Front Set  
Automatic Detection  
ShortCut PING  
Alarm Output  
Channel exchange ▶

[**Front Set**] Reference 6.3.6


[**Automatic Detection**] Check connection status of the current channel.

[**ShortCut PING**] Check the current channel network whether is connected.

[**Alarm Output**] Set the front-end device alarm output mode.

[**Channel exchange**] Exchange position of channels.

The front-end device has not been added into IP channel:

A dark gray rectangular menu with white text. The text is arranged vertically: "ShortCut PING" and "Add To" followed by a right-pointing arrow.

ShortCut PING  
Add To ▶

[**ShortCut PING**] Check the current equipment whether is connected.

[**Add To**] Add device into the special channel.

## 6.4 The Event of Configuration

The events are those user not expected, including traditional alarm events, equipment abnormal events, intelligent analysis.


Configure an event obey four parts: the event type, rules, protection plan, alarm linkage.

### 6.4.1 Video Detection Configuration

The video detection includes motion detection, video lost, video blind.

[**Main Menu**]-[**Channel**]-[**Detect**] Enter into the configuration interface.

**Video detect**

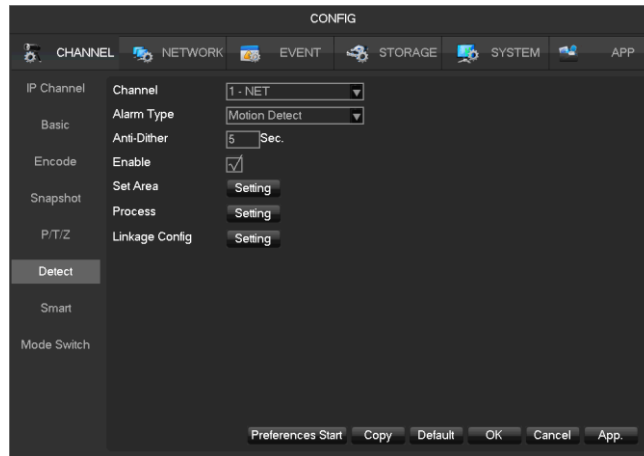

**[Channel]** Select a channel.

**[Alarm Type]** Motion detection, video lost, video blind and VQD.

**[Motion Detection]** Detect the motion in the picture, and send alarm according to setting.

**[Video Lost]** Detect the video loss and send alarm according to setting.

**[Video Blind]** Detect the video which was covered and send alarm according to setting.

**[VQD]** Analysis the video quality, if virtual, camera move or color cast, then will alarm based on the alarm plan.

**[Anti-Dither]** Will only alarm one time during this time, the default is 5sec.

**[Enable]** Enable the alarm or not.

**[Set Area]** There are totally  $22 \times 18 = 396$  area can be set, support 4 kinds of sensitivity.

**Sensitivity:** Highest, higher, middle, low, lower, lowest.

**[Process]** Set the alarming time, linkage and the handling method.

**[Linkage Config]** Set the alarm linkage and the handling method.

**[Preview]** It will show a test on the current setting.

**[Copy]** Copy the setting to other channels.

## 6.4.2 Intelligent Analysis


Cooperate with our IPC, IPC's firmware version 112, can achieve the intelligent communication function.

A part of devices support face detection and parameter detection function. The recorder analysis not rely on the camera.

### Mode Switch

If the device supports intelligent analysis, enter into menu **[main menu]**-**[Channel]**-**[Mode Switch]**. Choose

the channel to open the intelligent analysis function or change the intelligent function of the equipment.

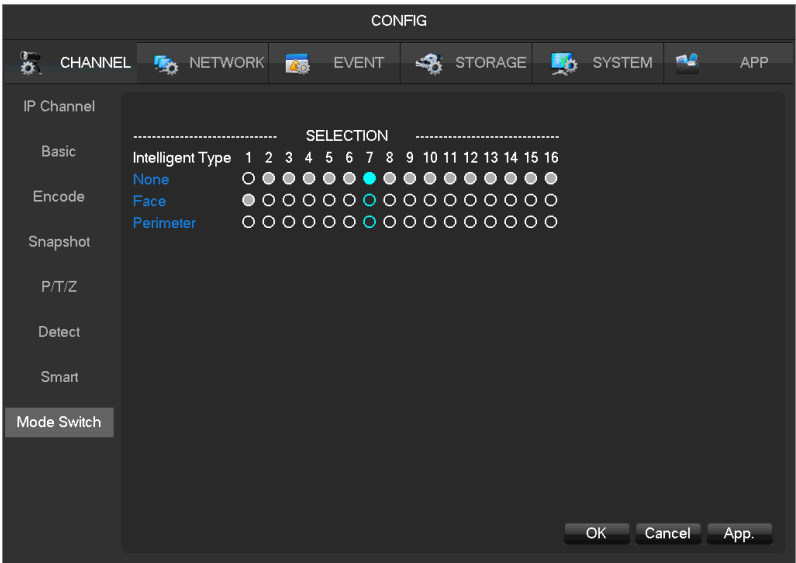

The local Intelligent analysis feature depends on the mode.

### Smart Configuration

Cooperation with our IPC, IPC's firmware version 112, can achieve the intelligent communication function.



[Channel] Select Intelligence channel.

[Alarm Type] Built-in face detection and perimeter.

[Face Detection] Capture faces and alarm.

[Perimeter] Analyzing move target forward, backward across the line and invading the region and left and generates an alarm.

[Enable] Open intelligent analysis.

[Track Enable] Tracking control box on and off


**[Settings]** Set the intelligent analysis rules. The details see appendix 6.4.2.

**[Process]** Choose the protection plan, enter the editing plan that we can configure the time of protection every day.

**[Linkage Config]** Show in the appendix 9.1 about set alarm linkage.

### Face Detection Configuration

When a device open the face detection function, enter the page of face detection by **[Channel]-[Smart]**:

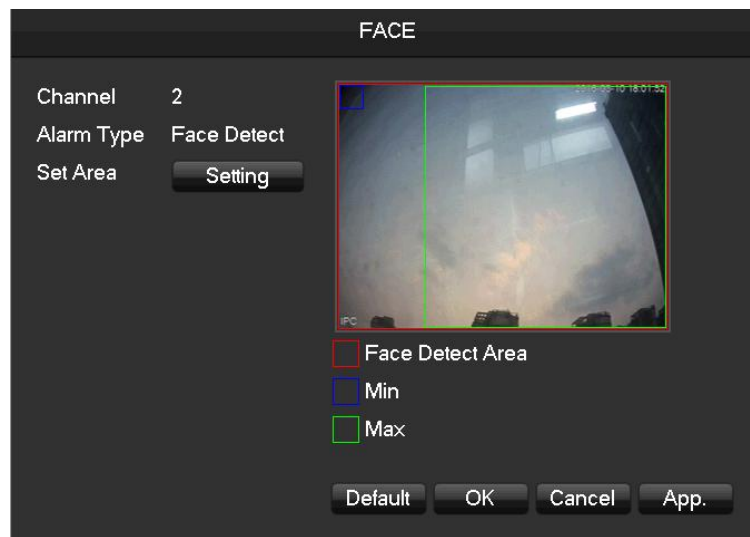

**[Channel]** Select Intelligence channel

**[The minimum]** The minimum area of the face detection, blue scope refer to the minimum area of the face, the face can't be picked if the face less than the minimum area of the face detection. According to the practical use of scene and the expected area of the face detection to set the function.

**[The biggest]** The biggest area of the face detection, green scope refer to the biggest area of the face detection, the face can't be picked if the face bigger than the biggest area of the face detection. According to the practical use of scene and the expected area of the face detection to set the function.

**[red scope]** Detection area, after set the function, the equipment only can detect the area of the face, Can effectively reduce false positives and omission.


### Perimeter Intrusion detection configuration

When the equipment open the perimeter analysis function, can enter the perimeter setting page by

[Channel]-Alarm Type-Perimeter.



*Note: if there is no channel to analysis the perimeter detection, you can set the function by [Channel]-Alarm Type-Perimeter*

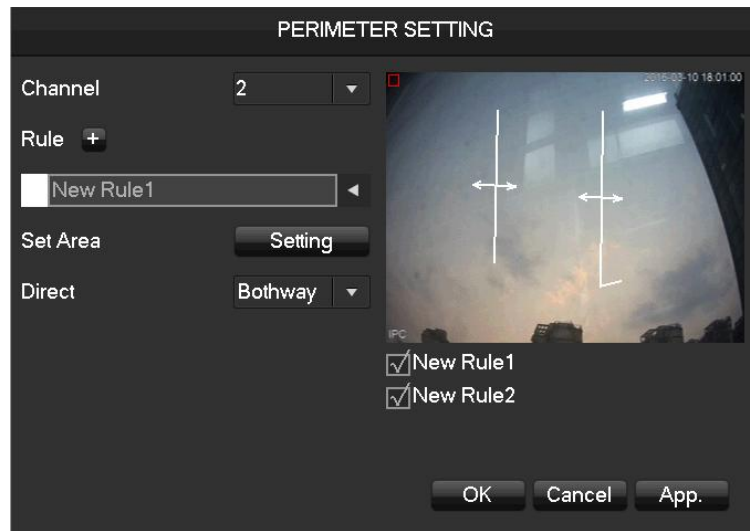

[Channel] Choose the channel of the perimeter analysis.

[Rule] Click “+” add rule.


[Set Area] Set current rule line what you choose.

[Direct] Set the fold line rules to sure the detection direction.

[Rule]

Click [+] make the new perimeter analysis rule.

Click the color box to set the line of color rule, show in the picture:

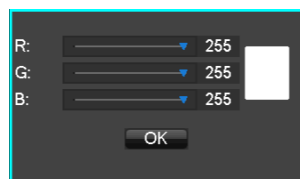


Click the rule name can modify the name.

Click the drop -down menu to choose the other rule, then can delete the rule.

## 6.4.3 Alarm Configuration

### Alarm Input

[Main Menu]-[Event]

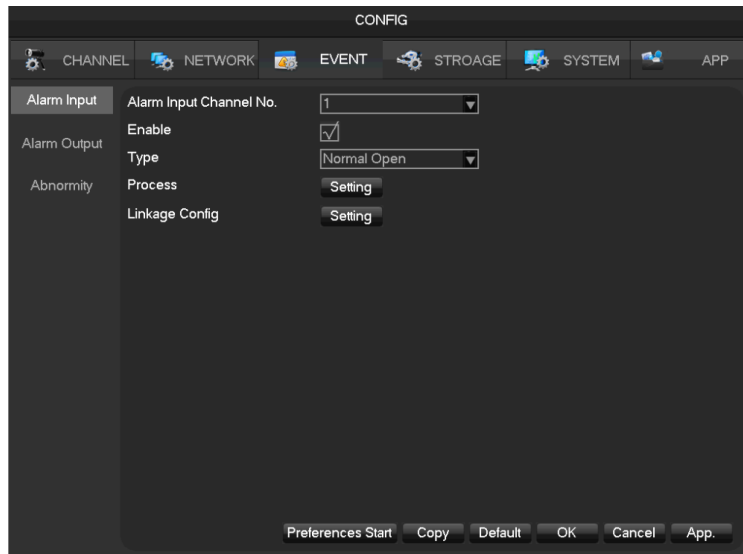

[**Alarm Input Channel No**] Select a channel.

[**Enable**] Control the open and close of alarm.

[**Type**] Choose Normal open and Normal close.

[**Process**] Set the alarming time, linkage and the handling method.

[**Set Linkage**] Show in the appendix 9.1 about set alarm linkage.


[**Preview**]It will show a test on the current setting.

[**Copy**] Copy the setting to other channels.

## Alarm Output

On the real time preview picture, right click and choose [**Alarm Output**], or enter

[**Main menu**]-[**Event**]-[**Alarm Output**]

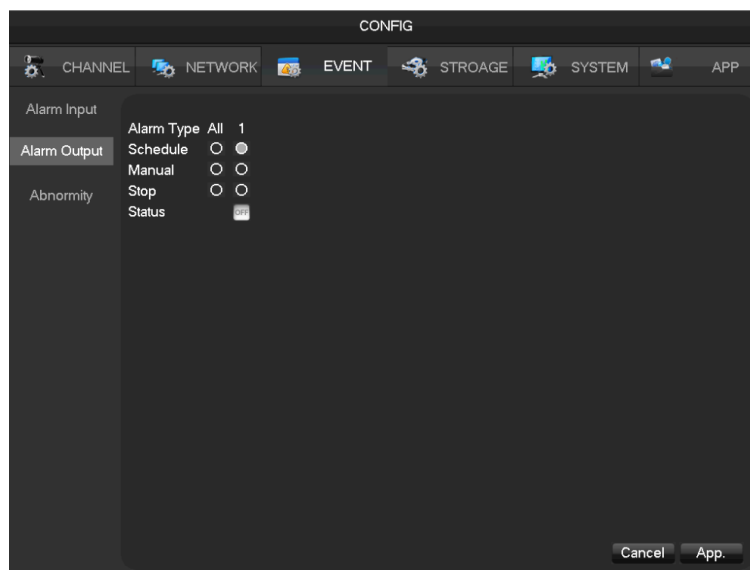

[**Schedule**] Alarm output is controlled by the device's linkage setting.

[**Manual**] Alarm output is on and the status is active.

[**Stop**] Alarm output is off and the status is inactive.

[**Status**] The current alarm output status.




*Note: some models do not have alarm output, please refer to some relative data sheet.*

## 6.4.4 Abnormal Alarm

Provide multiple equipment abnormal monitoring function, and it can do the corresponding alarm linkage of equipment abnormal events.

[**Main Menu**]-[**Event**]-[**Abnormality**] Enter the configuration interface as shown in the figure below:

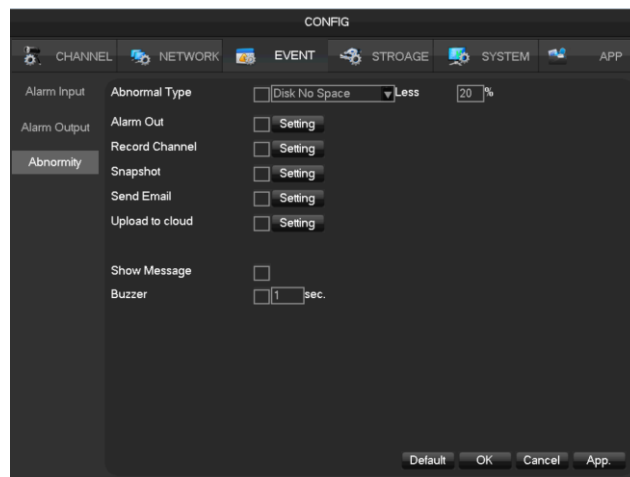

### [Exception type]

[**No Disk**] Alarm when HDD is not present or cannot be detected.

[**Disk Low Space**] Alarm when hard disk capacity is lower than setting.

[**Network Failure**] Alarm when network is not connected.

[**IP Conflict**] Alarm when IP address conflict.

[**Disk Error**] Alarm when there is error in reading and writing hard disk.


[**Alarm Output**], [**linkage record**], [**snapshot**], [**Send Email**], [**show message**], [**Send to network drive**],

[**buzzer**] Show in the appendix 9.1 about set alarm linkage.

## 6.5 Log in/Log out

### Log in

Right click to log in menu. Enter username and password.

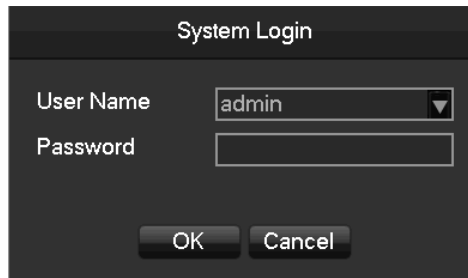A dark-themed dialog box titled "System Login". It contains two input fields: "User Name" with a dropdown menu showing "admin" and a small downward arrow, and "Password" with a standard text input field. At the bottom, there are two buttons: "OK" and "Cancel".

System Login	
User Name	admin ▼
Password	
OK Cancel	

Default users

User Type	Name	Default Password
Administrator	admin	123456
User	user	123456
Hidden	default	



*If enter error password more than 6 times, the DVR/NVR will beep, and the account will be locked. Shut down the device then re-power it or leave the device about 5 minutes, the account will unlock automatically. To be safety, we recommend you to modify the password before settings.*

### Log out

1. When over the standby time, log out automatically.
2. Enter **[Main Menu]-[Shutdown]-[Log out]**.

## 6.6 Preview

### 6.6.1 Live Preview

In live monitoring, there are date, time, channel name, recording status and alarm status.



Control screen switching by front panel, remote controller and mouse.

When alarm occurs, it will show message like external alarm, video loss, video blind, motion detect, network status and IP address conflict.









### Quick Operation

Switch single or multiple screens	Double left click in screen to single channel and Double left click to return
Adjust channel order	Drag the channel to the wanted position
Add device	Click [+] in one channel to enter add menu. Please refer to 6.3.2 about more details.

## 6.6.2 Channel Toolbar


When mouse move on the top of windows,it will show channel toolbar as follows:



-  Real-time playback in five minutes.
-  Backup the last five-minute video to U disk, backup time can be set.
-  Snapshot and backup to U-disk.
-  Channel toolbar is temporarily closed within 30 seconds.
-  Set the volume of sound.
-  Set the bothway talk.

## 6.6.3 Right Click Menu

Enter real-time monitoring and right click menu.

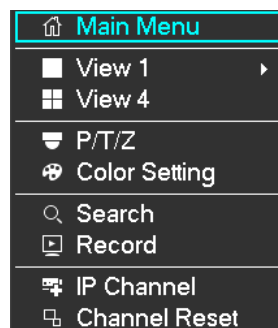

### Screen Division

Choose single screen, four screens, nine screens or sixteen screens to view.

### PTZ Control

Configure PTZ. Please refer to 7.2.4 and 6.3 about more details for analog camera and IP camera.



After done configuration, click “PTZ Control” in corresponding channel to control PTZ.



Direction, steps, zoom, focusing, iris, preset points, cruising between points, patrols, sweeping the boundary, calling an auxiliary switch, light switch, horizontal rotation of PTZ can be controlled.

**[Direction]** Support 8 directions.

**[SIT]** means quick location button. Make sure that the protocol supports this function. After enter the page, click a point in screen. PTZ will turn to the point and move the point to center of screen. Besides, It also supports 4 to 16 times zooming when drag mouse in the quick location page.

The **[Step]** is mainly used to control directions. The figure can be set from 1 to 8. Click  or  to adjust zooming, sharpness and brightness.

PTZ can control eight directions. But front panel only can control up, down, right, left.

**[Present]** Enter present figure in box and click “Present” button to call present function.

**[Tour]** Enter cruise figure in box and click “Cruise” button to call cruise between points function.


**[Pattern]** Enter patrol figure in box and click “Patrol” button to call patrol function.



:gray button means don't support the function.

### Configure **[Present]**

Present is for recording the next position, which is marked by a figure. Call the figure to enable present function.

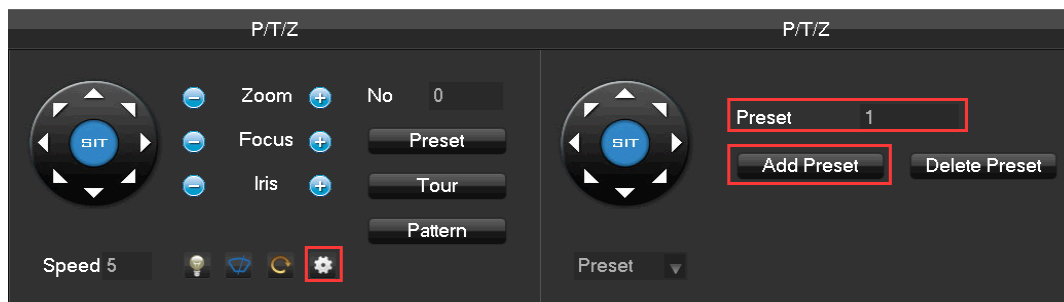


### Configure [Tour]

Tour includes several present points and is marked by a figure. When call the figure, present point will run one by one.




### Configure [Pattern]

Pattern is consisted of PTZ rotation path and is marked by a figure. Call the figure to enable patrol function.

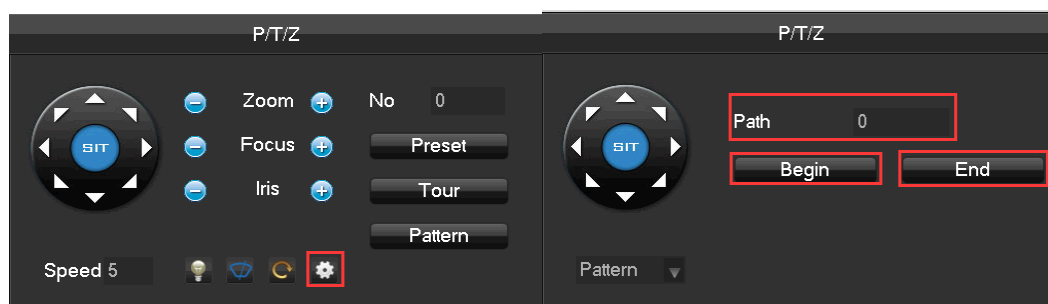

### Color Setting

Adjust the specified screen (single screen) image color hue, brightness, contrast, saturation, gain and white-level parameters set two time periods according to the local environment difference between day and night for each adjustment period set, the device will automatically switch to the best video quality.

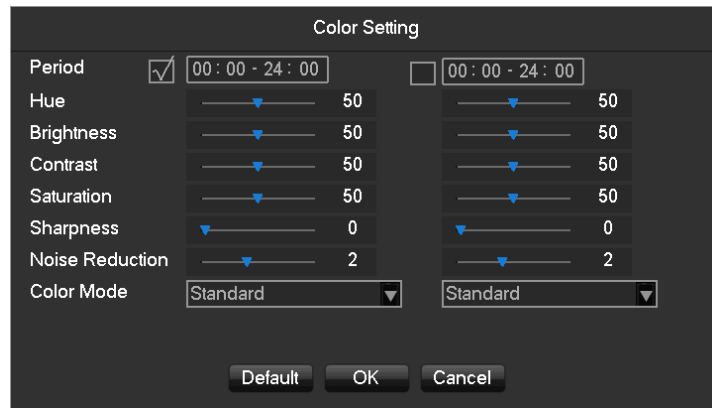

**[Period]** Two periods can be set according to ambient light during the day and night, device will automatically switch configuration time. Need to select the Enable box.

**[Hue]** Adjust according to image color cast

**[Brightness]** Visual image brightness, according to the environment, reduces or increases the brightness of the image brightness to make the image relatively clear.

**[Contrast]** Adjust image of black and white in proportion, the greater ratio, the brighter image.

**[Saturation]** Image color purity, the greater value, the more colorful images.

**[Sharpness]** It reflects the image sharpness and edge sharpness of image. The higher the sharpness, the contrast of the details on the image is higher.

**[Noise Reduction]** Reduce the picture noise levels, the higher the level, the less noise, but the sharpness will be lower.

**[Color Mode]** Support Standard mode and Gorgeous mode.

**[Image Mode]** Support Real mode and Transparent mode.




*Note: [Noise Reduction] only work for analog channel. Different mode different function*

## The Video Inquiry

Refer to 6.7 Search.

## Manual Record

In real-time monitoring screen, right click and select **[record]** to enter the interface.

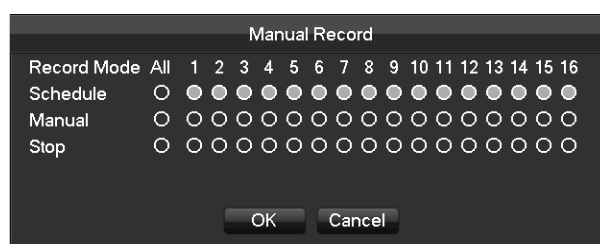

**[Manual]** It has the highest priority and corresponding channels will record for whole days after chosen.

**[Schedule]** Record according to recoding configuration.

**[Stop]** Stop recording.

To change a channel state of the video, at first check the video channel state is in selected or not, then use the mouse to click, or use **[τ]** and **[υ]** to find the channel and use **[π]** and **[θ]** to switch the video channel state.



*Note: Select all channels and enable can change the video state of all channels at the same time.*

### IP Channel

Refer to 6.3.3.

### Reset the channel order

Click to reset the default channel order.

## 6.6.4 Task Bar

Enter from the main menu and provide some quick operation.



### The Screen Switching

To implement screen switch function



Above single, four, nine and sixteen channel.

### View Favorites



Support add and manage the views. Support collect channels and switch the channel sequence.

### PTZ control



Brings up the PTZ control Menu

Refer to 6.4.2 PTZ control of the right-click menu.

### Record Search



Click to select the Searching interface

Refer to 6.7 Search

### Manual Record




Click to select manual record interface. Refer to 6.6.3 Manual record of the right-click menu.

**NET Channel Management**

 Click to enter Net channel interface

Refer to 6.3.3


**Alarm Status**

 Check the recent alarm status, click to show the following alarm message


Alarm Status

Alarm In	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16	17	18	19	20	21	22	23	24
Video Lost	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16								
Mask	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16								
Motion	1	2	3	4	5	6	7	8	9	10	11	12
	13	14	15	16								
Network	<input type="checkbox"/>	<input type="checkbox"/>										
IP Conflict	<input type="checkbox"/>	<input type="checkbox"/>										


**Shutdown**

 Menu logout, device shutdown, system reboot.


**Intelligent window switch**

 Intelligent window switch


When the system is face/perimeter analysis status, click to close the intelligent window in the right side of real-time monitoring screen and click again to open it.

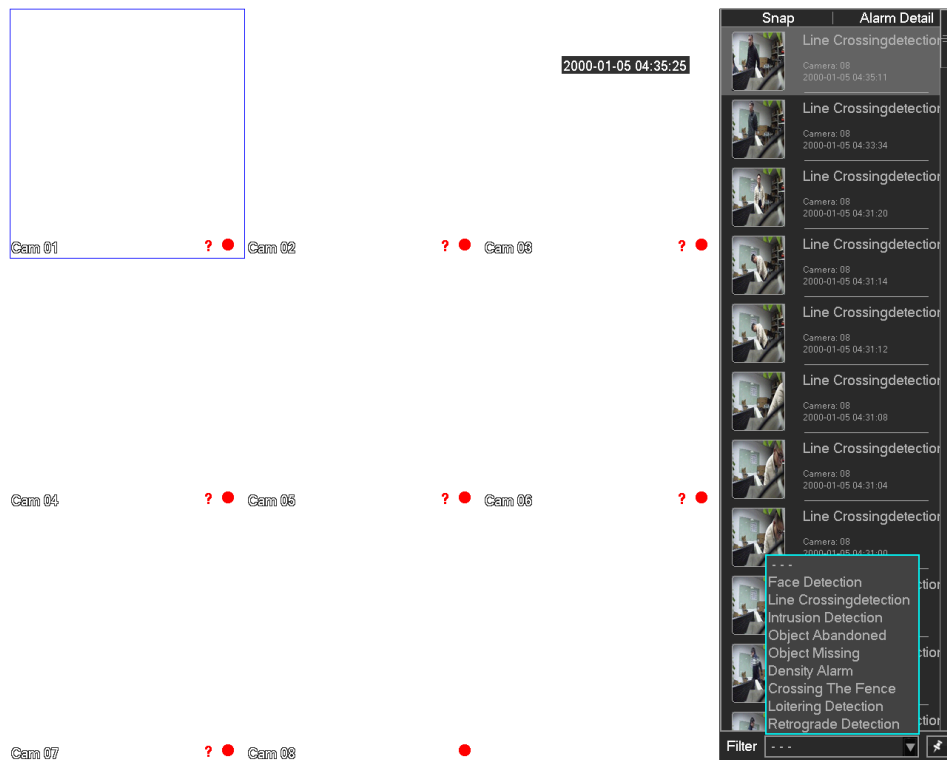


**[Filter]** Events filter: Face detection, Line Crossing detection, Intrusion detection, Object abandoned, Object missing, Density alarm, Crossing the fence, Loitering detection, Retrograde detection.

 Tag the event.

### Conceal function


 Color setting

Refer to 6.4.2 Color setting of the right-click menu.

 Reset the channel order

Click to reset the default channel order.

 Taskbar Configuration

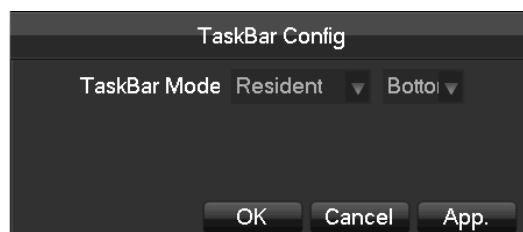


**[Taskbar Mode]** Chose the taskbar resident or automatically, and display at Bottom or TOP.

## 6.7 Search


### 6.7.1 Search

In real-time monitoring screen, right click and select **[search]** to enter the searching interface.

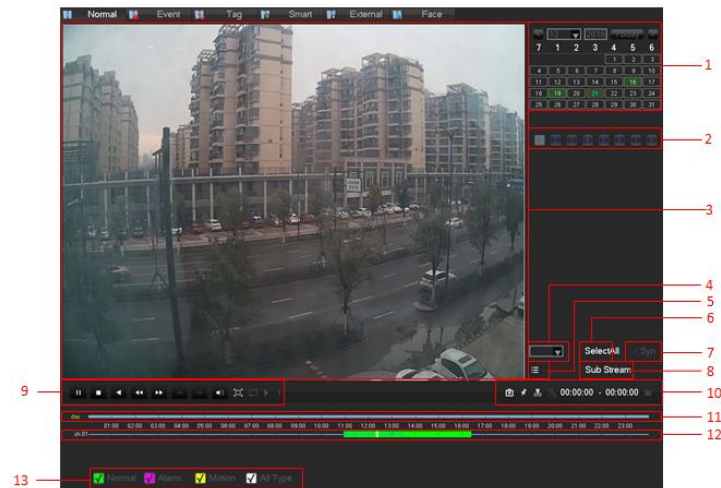


**Record Search interface description:**


Index	Type	Description
1	Choose the date	Select the time and date to search records.
2	Select channels	Choose the channels for querying.
3	Playback window	Playing video.
4	Time bar channel	When you select the number of channels is more than 4, a channel number value for the timeline display
5	List	Show the status information of channels' video recording within one day by green, red, yellow.
6	All Channel Select	All select, all cancel
7	Synchronization	Achieve the playback of each channel's record is of synchronization in time and of consistency in operations.
8	Sub Stream	Playback with sub stream recording file.
9	Playback control	Full screen, Loop, Stop/Play、Pause、Fast、Slow、Back、Previous Frame、Next Frame.
10	Video Edit Tool	To realize snap, tag, video cut, etc. functions.
11	Event list	Show all events and time
12	Timeline display	Green, red and yellow colors show the video recording in the one day
13	Search Type	128 video records are shown in the list. Type: R—normal record, A—alarm record, M—motion detection record.

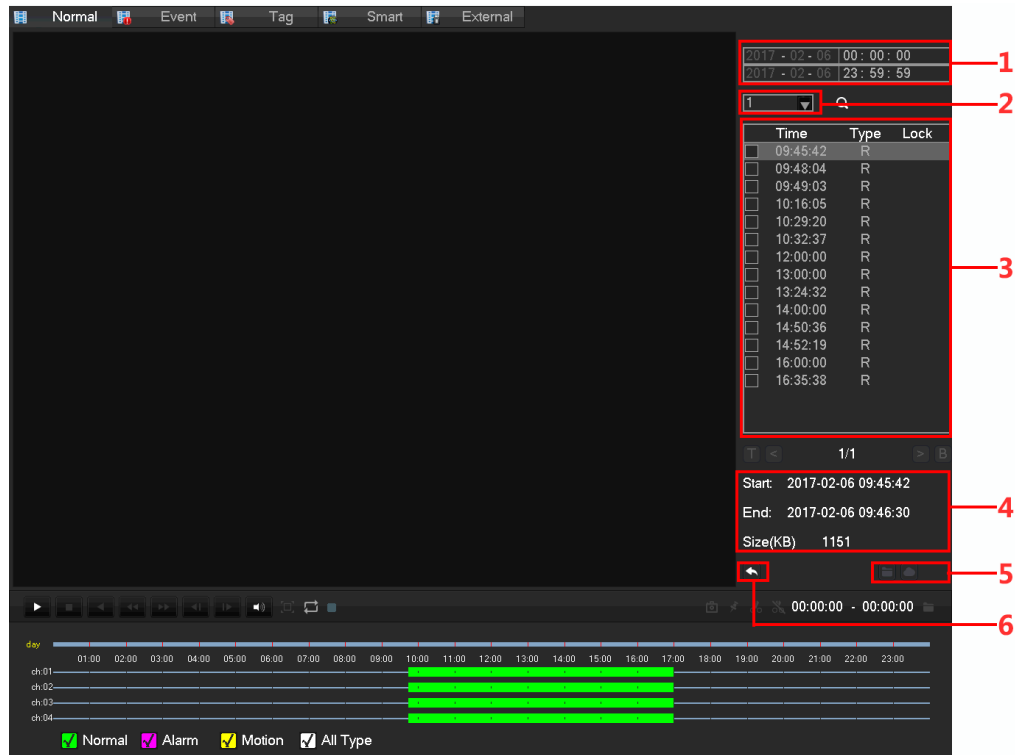













#### List:

  Key	Type	Description
1	Time	Choose video query time
2	Channel	Select the desired query video channel
3	File	Query channel video display a list of files
4	File information	Display start time for a single video file, the end time, and video file size.
5	Backup	In the file list box, select the user needs to back up files in the list box playing "📁" to  check, and then click the button (backup) or (uploaded to the cloud disk), the backup operation menu appears, click the Start button, users can also do not want to cancel the backup files in the backup operation menu before you want to cancel the file list box cancel "🚫".
6	Back	Exit File List

#### Playback Control:










Key	Description	Remark
Video playback: Fast-forward Key 	Under playback mode, pressing this key, you can get a variety of fast cycle switching speeds; fast-forward button can be used as slow-release button reverse switch key.	Actual play rate based on version

Video playback : Slow key 	Under playback mode, pressing this key, switch cyclically support a variety of slow-release rate, slow release button can be used as fast-forward button reverse switch key.	
Play/pause 	Play/pause switch when slow-play	
Backward: Backward key 	Single left click backward key	To play backwards and single click again to stop back run under common playback Rewind or single-frame playback, press the play button  /  to enter the normal playback .
Manual single frame playback 	single frame playback by clicking  and  when common playback pause	
Audio 	Adjust the audio	
Full screen 	Full screen	
	When the loop is turned on, the day after the end of the video playback, video playback file start over again	
	Display the current status: normal playback, reverse playback, fast playback level, etc.	Just display the status, can't set.



1. The player playback control bar shows file playback speed, channel, time, playback progress and other information.
2. Playback speed and rewind function are related to DVR version, and please prompt on the player panel shall prevail.

#### Video edit button:


Key	Description	Remark
Snapshot: 	When Playback, left-click on the icon, the snapshot of focus on window will back up to the U disk	Insert U disk, enter Search , supports a maximum resolution of 1080P
Tag: 	Left-click the icon, you can add tags to focus channel	set the tag name letters, numbers, special characters, the total length of no more than 31 characters. The tags can be used to add labels to retrieve.
Cut: 	Left click  , start to cut record, Starting time: click  focus window, icon turn to  ; left click again  complete cutting, End time: click  focus window。After finish cutting, click  to back up record, or right click to exit cut feature。	If the focus of the shearing process channel change, places the focus of the channel when the end of the shear cut as a video channel. Shearing process can playback control. When the cut end time is earlier than the start time cut, cut start time



List of events can flip through page keys. Double-click the event list for playback directly.

The default time of 30 seconds before and after the event to play video files, can be configured to around 30 seconds, 1 minute, 5 minutes, 10 minutes

6.7.3 Tag Search

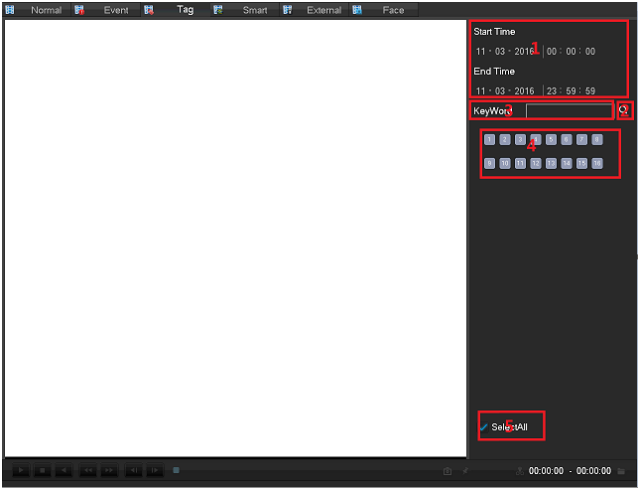

Index	Type	Description
1	Play Timeline	Display the progress bar of the current event
2	Search	Search recoding
3	Event Type	Select the type of event
4	Channel selection	Select the channel
5	Select al channel	Select al channel

3	Channel	Tag Name	Time
1	02	tag2	11-03-2016 12:23:05
2	03	tag1	11-03-2016 12:23:13
3	01	tag	11-03-2016 12:27:26

Total 3 Page 1/1


Before/After 30 Sec Turn < > Delete

6.7.4 Smart Search

Intelligent playback that video playback time, according to the input retrieval conditions, video analysis, quickly locating the qualified video, and playback.

Currently our DVR, TVR device supports retrieval based on intelligent motion detection playback area.


Enter the smart playback interface, the interface as shown in FIG.

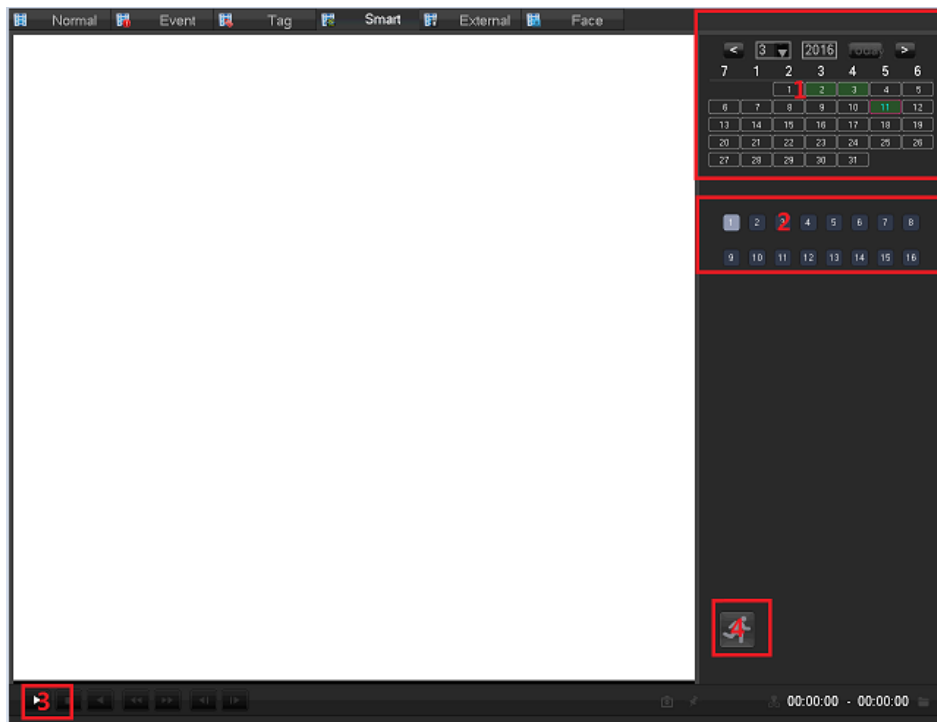

Intelligent playback using the following process


1. Position 1, select the desired search date.
2. Position 2, select the desired search channel (radio).
3. Left-click on the third position to start playback.
4. Left-click on the icon position 4, select dynamic inspection area.
5. Full-screen setting area is completed, the right mouse button to exit the configuration. Complete search, video recording shall be the date the presence of all the moving subject information of the channel region is configured to display on the timeline.

6.7.5 External Search

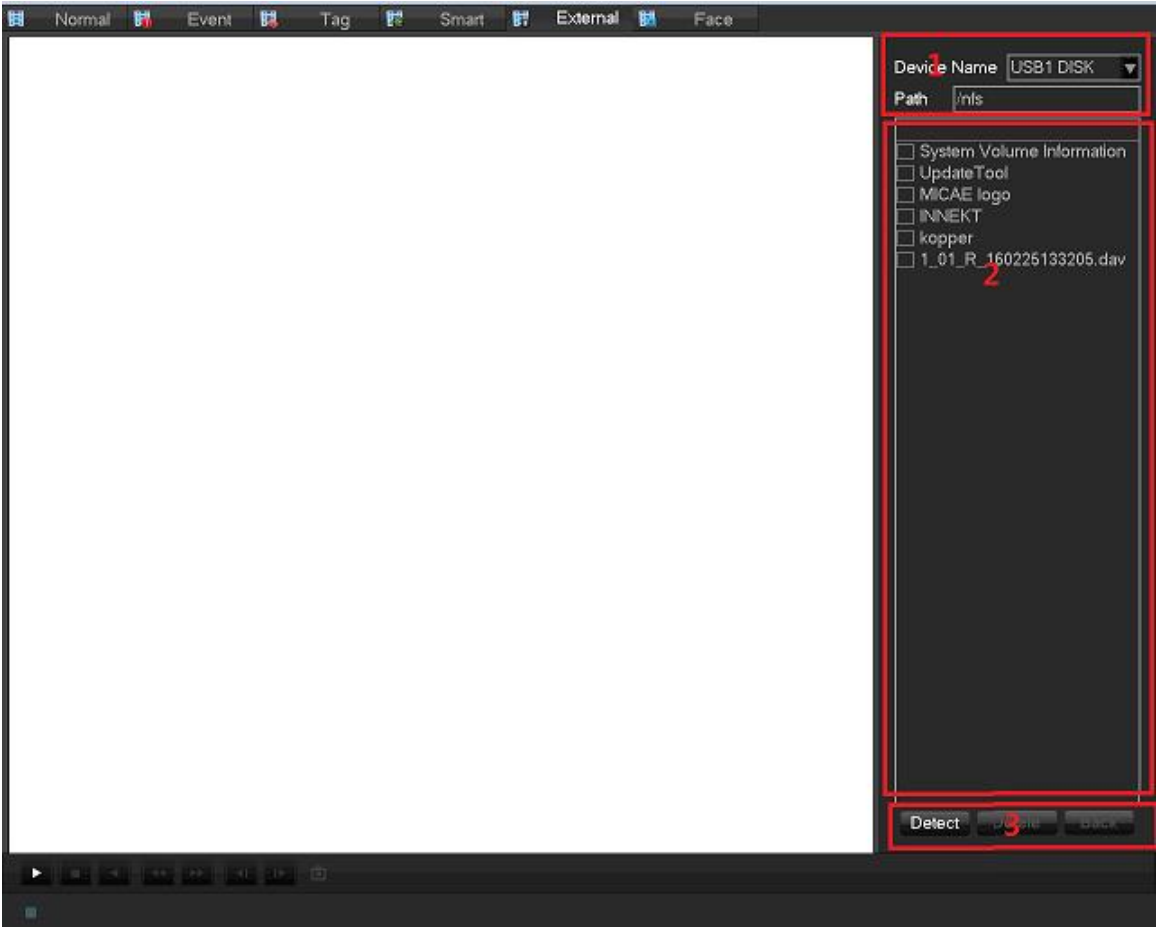

Index	Type	Description
1	File Path	Playback of each channel's of synchronization.
2	Folder Contents	Select channels desired to query records.
3	File Control	[Device Detect] Left-click the device detects the detection insert U disk
		[Delete] Left click, delete the file
		[Back] Click the left mouse button to return to the previous folder

## 6.7.6 Face search

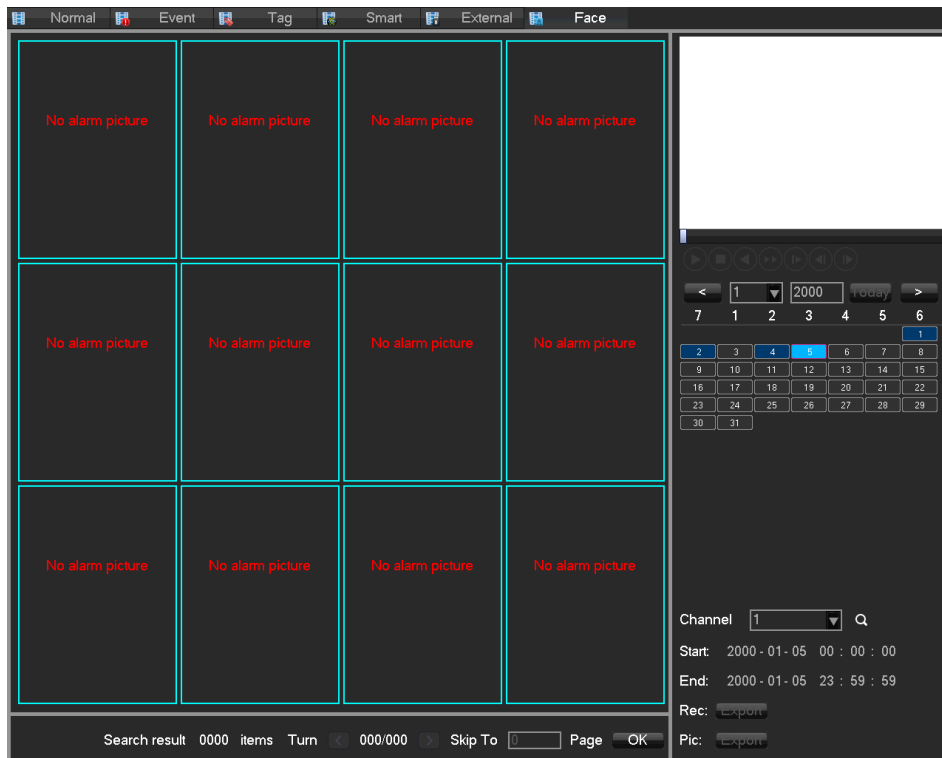


Index	Type	Description
1	Play windows	Play the video.
2	Play Timeline	Display the progress bar of the current event
3	Playback control	Stopping / playing, pausing, fast playing, slow playing and the previous/next frame on a suspended state.
4	Calendar	Select the date to search records.
5	Face list	Show the all face images of the channel in the query time.
6	Channel number	Select the channel number.
7	Search	Click to search out record files.
8	Time Search	Search the records based on the starting time and end time.
9	Face Statistic	Display the total number of face images and pages of the channel in the query time .
10	Page number	Display the current page and the total number of pages. Page up and page down.
11	Export	Export all the face images of the current page..
12	Process	The process of backup

## 6.8 Record Backup


### Interface Description

Connect an External USB device with the USB port to backup file in the **[Record Backup]** menu.

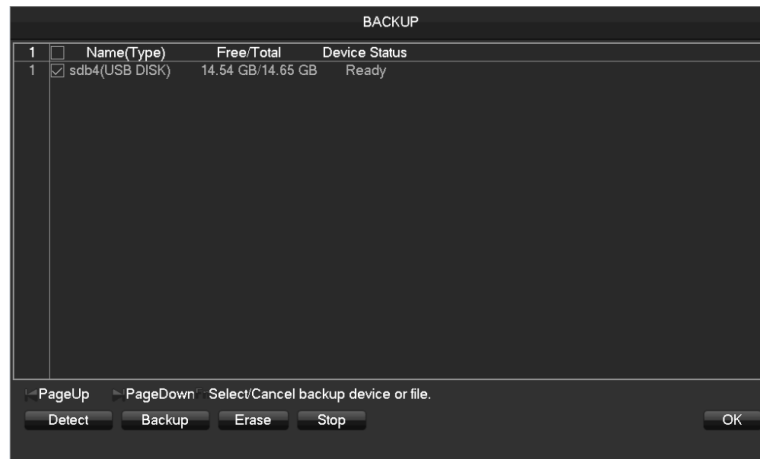

**[Detect]** Identify external USB device and display the device information.

**[Backup]** Tick the external device and click **[Backup]** to enter the backup menu .

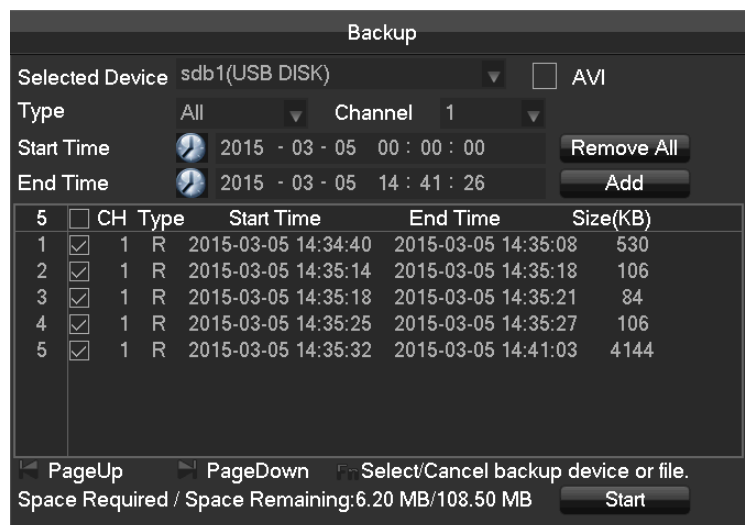

**[Cancel]** Delete all data in USB backup device

### Backup Operations

Connect an External USB device with the USB port, click **[Detect]** to Identify external USB device, click **[Backup]** to enter the backup menu, select the record start -stop time and click to add files in list, click **[Start]** to backup and display time remaining.




USB backup carry player automatically. This operation probably will cause permanent data loss.

# 7 Local Configuration

## 7.1 The Introduction of The Main Menu

The main menu is shown as the following interface:

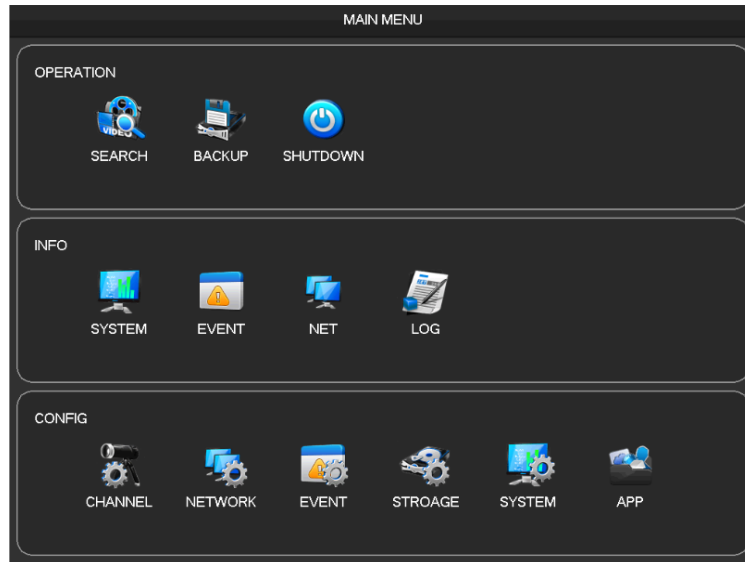

### Operation

**[Search]** Based on time, time, label, query and playback video files.

**[Backup]** Backup device detection and video data.

**[Shut Down]** User logs off the device, the device shut down and reboot the system.

### INFO

**[System]** Displays the system status, hard drive status, version information.

**[Event]** displays alarm information.

**[Net]** Stream state, the online user information.

**[Log]** System log information.

### Config

**[Channel]** Add / Remove the camera, the camera parameters, the basic parameters of the channel configuration, channel mode switch, channel events and joint management parameters.

**[Network]** Basic network configuration parameters settings, manage network interfaces, configure advanced network services.

**[Event]** External alarm events and abnormal events of the configuration parameters of the device and joint


management.

**[Storage]** Hard disk storage configuration management, video parameter settings, set the record schedule.

**[System]** Configuration System parameters time, date, language configuration, management and video output parameters polling settings.

**[Application Center]**E-mail, P2P, cloud storage, mobile phones and other common functions push settings.


## 7.2 INFO

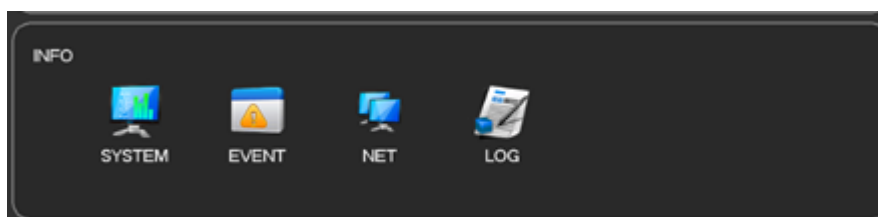

### 7.2.1 System


It displays the current total capacity of DVR hard disk, the remaining capacity and working conditions. As shown below:

#### HDD Manage

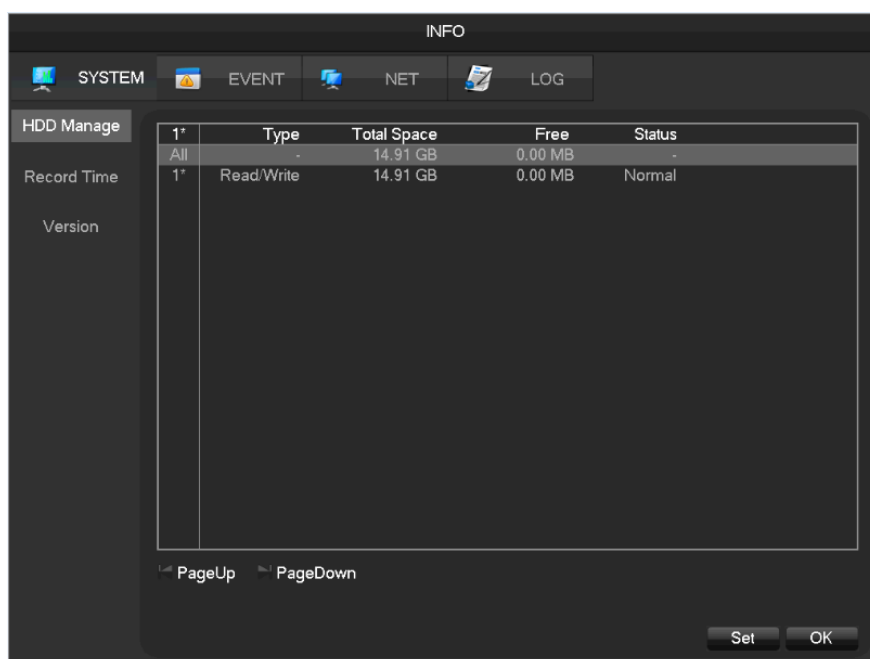

#### Record Time


Show starting and ending time of the computer's hard disk recording. As shown below

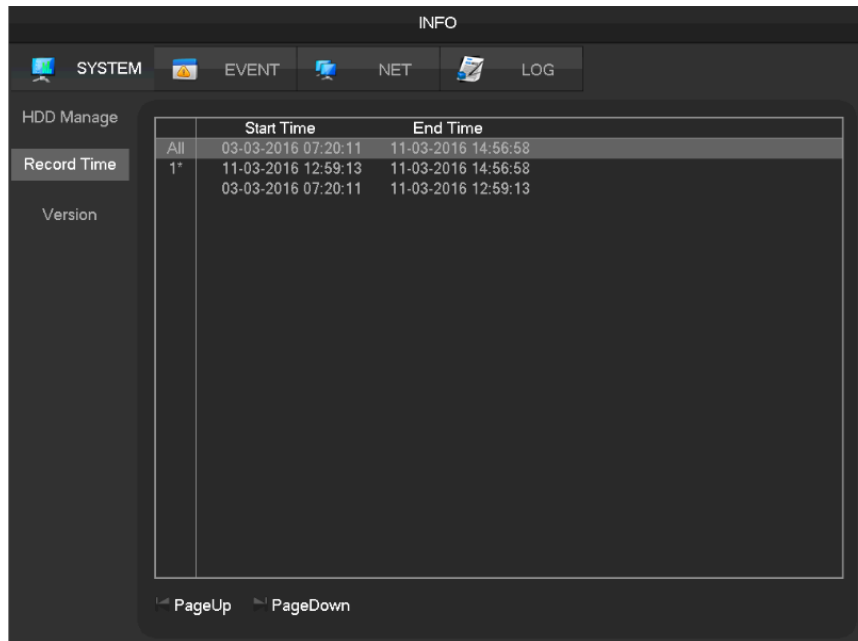

## Version


The display device serial number, system hardware features, software version and release date information.

As shown below

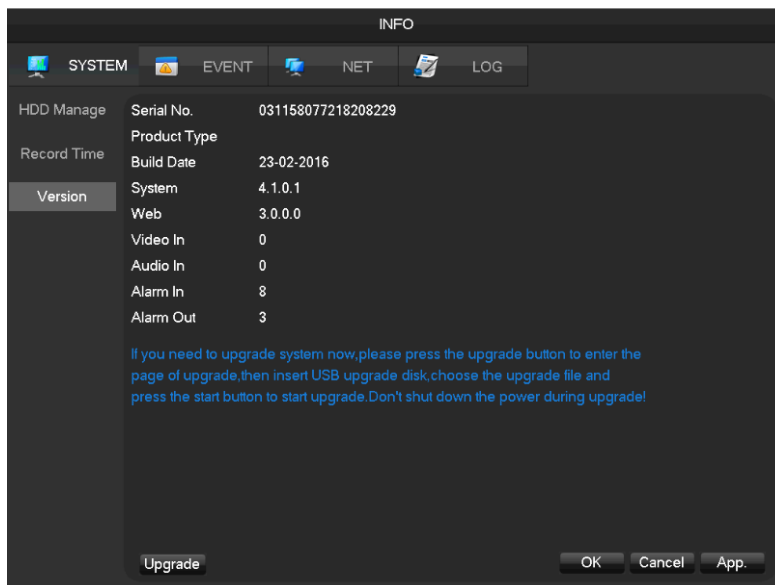

## 7.2.2 Event


Displays the current alarm status

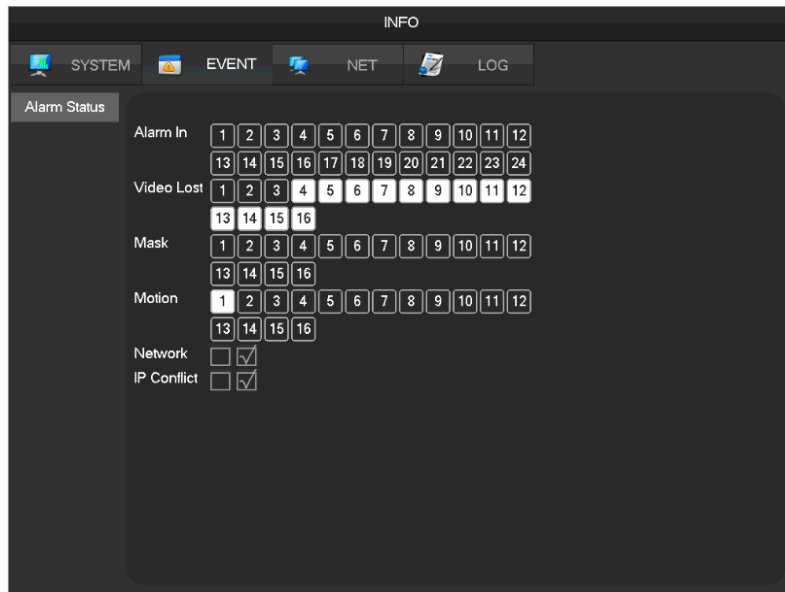

### 7.2.3 Net Information


The equipment with input function use network channel management page for add or delete the equipment and set the front-end configuration.

#### BPS

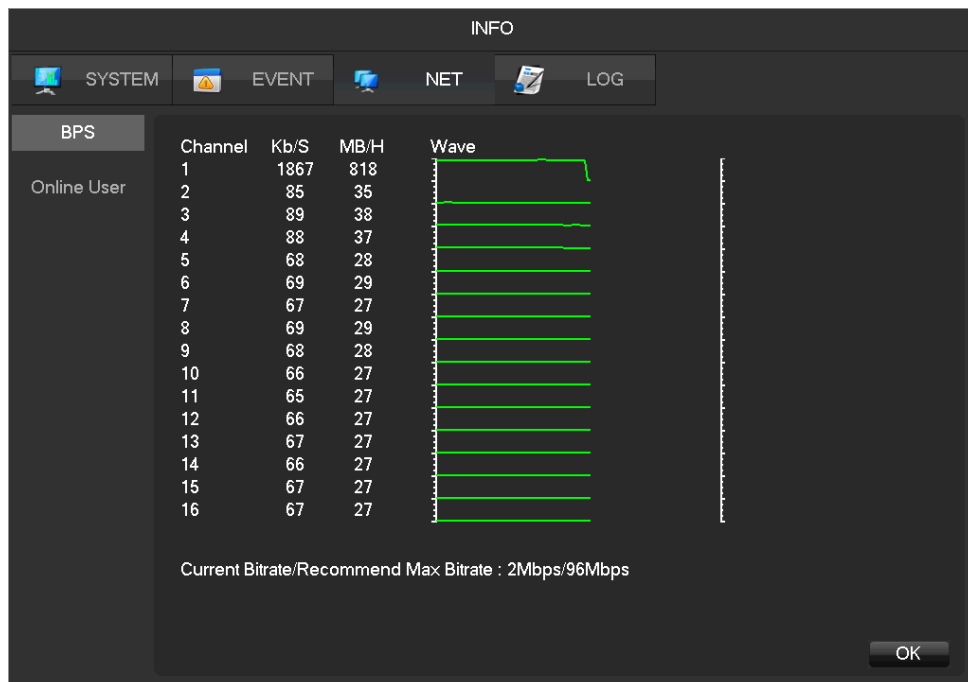


count the bitrate of each channel, the value is an estimated value.

## Online User

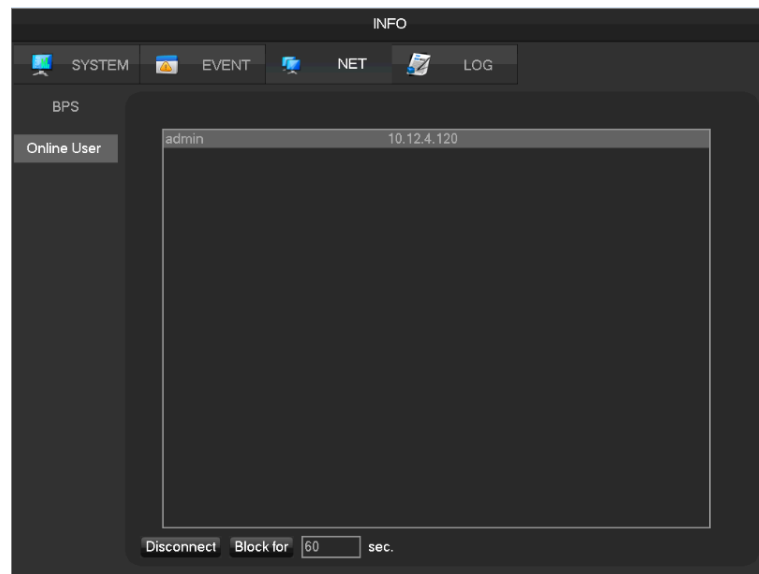

View the current online user status, disconnect and shielding.

## 7.2.4 LOG

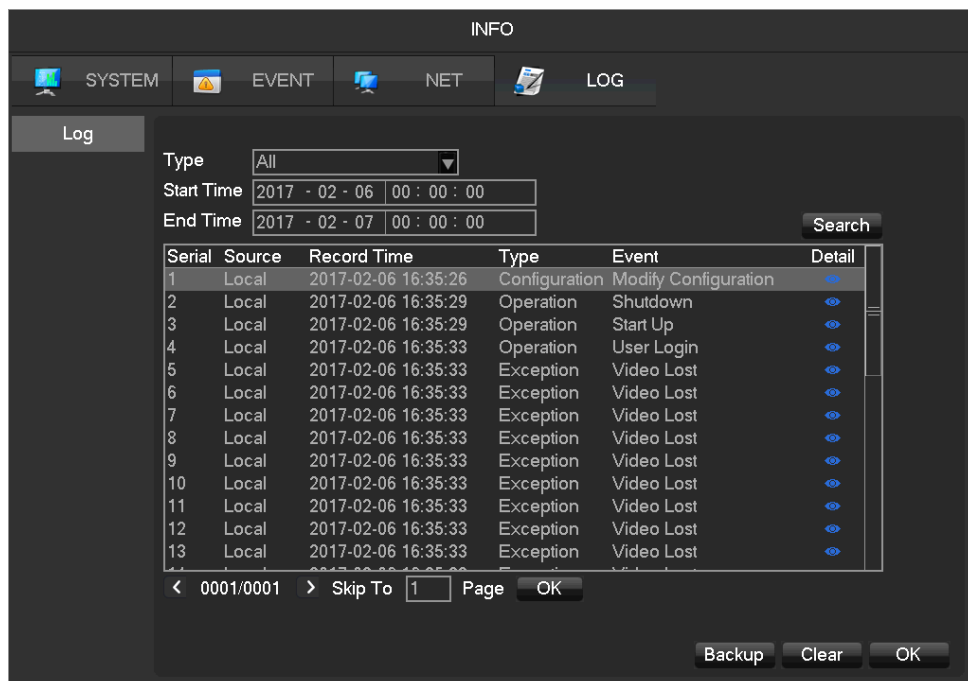

Log information can be divided into system operation, configuration operation, data management, alarm event, recording operation, user management, log clear, file operations.

Select the type and time of the query, press the Find button, the system displays the log as a list, and click the Backup button will log export backup to your computer.

Click the Clear button, the system will remove all types of log files.

## 7.3 CONFIG

### 7.3.1 Channel Setting

#### IP Channel

The operations to add / delete IPCs into NVR refer to 6.3.3 IP Channel Management.

#### Base

The screenshot shows the 'CONFIG' window with the 'CHANNEL' tab selected. On the left, there is a sidebar with options: 'IP Channel', 'Basic', 'Encode', 'Snapshot', 'P/T/Z', 'Detect', 'Smart', and 'Mode Switch'. The 'Basic' option is currently selected. The main area displays settings for '1 - NET'. The settings include: 'Channel Name' (text input 'Cam 01'), 'Sync to the front-end' (checkbox), 'Channel Display' (checkbox with 'Set' button), 'Time Display' (checkbox with 'Set' button), 'customtitle' (with 'titleset' and 'positionset' buttons), and 'Video Cover' (with 'Preview', 'Encode', and 'Set Area' buttons). At the bottom right, there are buttons for 'Copy', 'Default', 'OK', 'Cancel', and 'App.'.

**[Channel]** Choose the channel no. which needs setting.

**[Channel Name]** Set the channel name if in need.

**[Channel Display]** Set the channel name's display place on the picture.

**[Time Display]** Set the time's display place on the picture.

**[Time Synchronization]** Synchronize the time with net channel and device.

**[Video Cover]** Set some special area which needs special protection while preview and recording.

#### Encode

**[Channel]** Choose which channel to set.

**[Compression]** H.264 / H.265.

**[Resolution]** There are multiple resolutions to choose for main stream. Sub stream too. Users can set the parameter according to their needs.

**[Frame Rate]** PAL: 1fps-25fps; NTSC: 1fps-30fps.



*Main stream, sub stream and frame rate are vary depending on devices and firmware version.*

**[Bit Rate Control]** It includes fixed stream and variable stream. Under fixed stream, user can set encode stream, while under variable stream, user can choose 6 class of image quality, lowest, lower, low, middle level, higher, highest.

## Snapshot

**[Channel]** Select a channel.

[**Mode**] Trigger: Crawl images when alarm. Click to enable the function.

[**Image size**] Choose different resolution for snapshot.

[**Image Quality**] There are 6 levels of quality.

[**Snapshot frequency**]set highest capture rate for single channel, 1/2/3/4/5/6/7/8 s/pc.

## P/T/Z Control

The screenshot shows a configuration window titled "CONFIG" with several tabs: CHANNEL, NETWORK, EVENT, STORAGE, SYSTEM, and APP. The "CHANNEL" tab is selected. On the left side of the window, there is a vertical menu with options: IP Channel, Basic, Encode, Snapshot, P/T/Z (which is highlighted), Detect, and Mode Switch. The main area of the window displays settings for the selected "P/T/Z" option. These settings include: Channel (a dropdown menu showing "1"), Control Type (a dropdown menu showing "Coaxitron"), Protocol (a dropdown menu showing "COAXITRON"), Address (a text input field showing "1"), Baudrate (a dropdown menu showing "9600"), Data Bits (a dropdown menu showing "8"), Stop Bits (a dropdown menu showing "1"), Parity (a dropdown menu showing "None"), DVR control (a checkbox that is currently unchecked), and Frequency (a text input field showing "3" followed by "Sec."). At the bottom right of the window, there are five buttons: Copy, Default, OK, Cancel, and App.

[**Channel**] Select the PTZ channel to set.

[**Control Type**] Chose coaxitron or RS485, based on the channel type.

[**Protocol**] Select the PTZ protocol (e.g. PELCOD).

[**Address**] The PTZ's address.

[**Baudrate**] The PTZ's baudrate, can find it in the PTZ OSD, the default is 9600.

[**Data Bits**] Default is 8.

[**Stop Bits**] Default is 1.

[**Parity**] Default is none.

[**DVR Control**] Enable it can virtual the PTZ features.

[**Frequency**] Default is 3sec. The value range is 1~30secs.

## Detect

Video detection includes motion detection, video lost, video blind. The details refer to 6.4.1.

### Smart

The details refer to 6.4.2.

### Mode Switch

The details refer to 6.3.1 and 6.4.2.

## 7.3.2 Network

This menu section allows you to configure the network settings of the NVR. It is recommended that an experienced network technician should only be able to configure settings in this menu section.

The screenshot shows the 'CONFIG' window with the 'NETWORK' tab selected. The 'Basic' sub-tab is active, displaying the following settings:

Category	Setting	Value
Basic	Network Type	LAN
	DHCP	<input type="checkbox"/>
	IP Address	10 . 12 . 4 . 134
	Subnet Mask	255 . 255 . 255 . 0
	Gateway	10 . 12 . 4 . 1
	AUTO DNS	<input type="checkbox"/>
	First DNS Server	8 . 8 . 8 . 8
	Alternate DNS Server	192 . 168 . 1 . 1
	MAC Address	e0:61:b2:00:22:9d
	MTU	1500

At the bottom right of the window are buttons for 'Default', 'OK', 'Cancel', and 'App.'.

### Basic

**[Network Card Type]** LAN1: Default IP is 192.168.1.88;

LAN2: Default IP is 192.168.2.88

LAN2 is used to POE the IP camera. If the IP Camera is connected to the POE, the IP address of IP CAMERA and NVR must be in the same network segment.

**[DHCP]** Enable the NVR to obtain an IP address automatically. If it is enabled, the NVR will reboot and search for a DHCP server, and then assign a dynamic IP address. The dynamic IP address will be

displayed in the menu. Enter a static IP address if there is no DHCP service available. If you are using the advanced feature PPPOE, then the IP/mask/gateway and DHCP are unable to be changed.

**[IP Address]** Use (πθ) or input numbers to modify IP, then set **[subnet mask]** and **[default gateway]** for this IP.

**[AUTO DNS]** Get the DNS from the DNS server automatically.

**[First DNS Server]** DNS server IP address.

**[Alternate DNS Server]** DNS alternate IP address.

**[Physical Address]** Physical address of current net port.

**[MTU]** Default is 1500, range is 128-1500.

## Advanced

The screenshot shows a configuration window titled 'CONFIG' with several tabs: CHANNEL, NETWORK, EVENT, STORAGE, SYSTEM, and APP. The 'NETWORK' tab is selected. On the left, there are three sub-tabs: Basic, Advanced, and Application. The 'Advanced' sub-tab is selected. The main area displays various network settings:

- Port Setting**
  - TCP Port: 8000 (with a checkbox for 'UPnP Port Mapping')
  - HTTP Port: 80 (with a checkbox for 'No UPnP Port')
  - UDP Port: 8001
  - RTP/RTSP Port: 554
  - RTSP URL:
- Multicast Setting**
  - ☐ (checkbox)
- IP Address**
  -
- Port**
  -

At the bottom right, there are three buttons: OK, Cancel, and App.

**[TCP]** Default: 8000, variable.


**[HTTP]** Default: 80.

**[UDP]** Default: 8001.

**[RTP/RTSP PORT]** Default: 554.

**[Multicast]** Tick 'Multicast' and set a group in 'Set', IP should be limited as follow picture, port no limit.

## Application

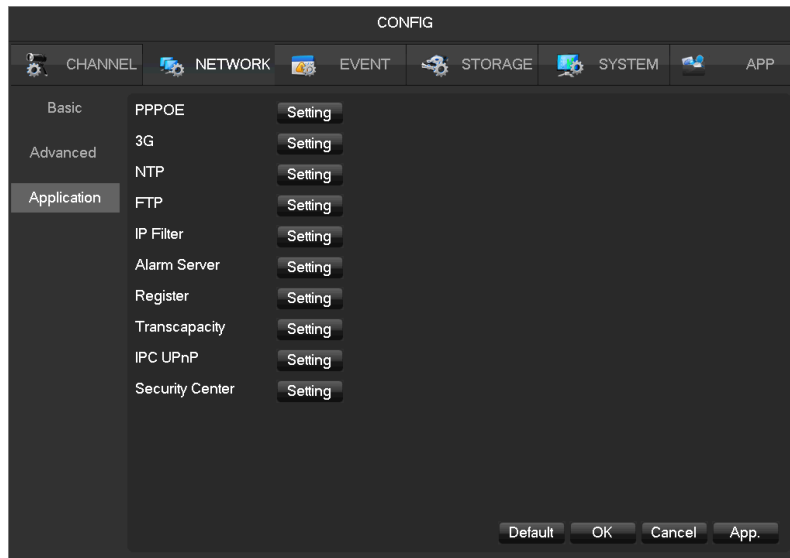

**[PPPOE]** Select Enable switch to turn on the PPPOE dial-up service of the device.

Enter ISP (Internet service provider) provide the saving of user, password for PPPOE.

Operation: Succeed after dialing, check the **[Network Status]**IP, then enter the IP address to access the device after open IE.

**[3G]** Support 3G card dial-up to provide remote access device features.

3G

signal intensity

3G TYPE  ☐ Enable

APN

dialing number

UserName

Password

IP

OnLine Status The module is not inserted.

SIM Card Not In

Default OK Cancel App.

[NTP] Select Enable switch to turn on the NTP protocol support, can be with SNTP communication server to realize automatic calibration function.

NTP

Server IP  ☐ Enable

Port

Update Period  min.

OK Cancel App.

**Host IP:** Enter the IP of NTP service NTP.

**Port:** Supports TCP transport only, port is limited only 123.

**Update cycle:** interval time is 1 minute or more, the maximum update period is set to 65,535 minutes.

**Time Zone:** London GMT+0, Berlin GMT +1, Cairo GMT +2, Moscow GMT +3,

New Delhi GMT +5, Bangkok GMT +7, Hong Kong & Beijing GMT +8, Tokyo GMT +9, Sydney GMT +10, Hawaii GMT-10, Alaska GMT-9, Pacific Time GMT-8, US Mountain Time GMT-7, US Central Time GMT-6, US East Time GMT-5, Atlantic Time GMT-4, Brazil GMT-3, Atlantic – Central GMT-2.

[FTP] Select the Enable box to make the protocol enable, to enter the FTP settings menu.

Two kinds of FTP upload file types are video files and pictures, set up an FTP server address, port, remote directories and so on. When remote directory is empty, the system will automatically create a different folder by IP, time, channel.

User name & password: access the FTP username and password.

Set upload file size, you need to upload the file channel, time, type, etc.

Set upload length which upload to FTP server file length, if less than the set value, the entire video file upload; If more than the set value, upload take part from the beginning and set the value of consistency, the file later omitted; setting a value of 0, then upload the entire video file.

Different channels can be set two different time periods, three types of video recording.

**[IP Permissions]** For permission to access the DVR IP rights management. When choosing the white list, the list indicates that only the IP to connect this DVR. Up to 64 IPs. If the selected item is not ticked, no restrictions on accessing to the device's IP.

**IP Filter**

---

Restricted Type Trusted Sites ▼ ☐ Enable

0 . 0 . 0 . 0 Add IP

Delete IP Delete All

OK Cancel App.

**[Alarm Center]** Alarm interface for customers to reserve the use of self-development.

**Alarm Server**

---

Protocol Type Private ▼ ☐ Enable

Server IP 10 . 1 . 0 . 2

Port 0

Everyday ▼ at 08:00 ▼

OK Cancel App.

**[Register]** Device connects to the platform automatically.

**Register**


---

Enable ☐

IP Address	<span>10 . 12 . 2 . 22</span>	Port	<span>4567</span>	Enable	<input type="checkbox"/>
IP Address	<span>10 . 12 . 2 . 22</span>	Port	<span>4567</span>	Enable	<input type="checkbox"/>
IP Address	<span>10 . 12 . 2 . 22</span>	Port	<span>4567</span>	Enable	<input type="checkbox"/>
IP Address	<span>10 . 12 . 2 . 22</span>	Port	<span>4567</span>	Enable	<input type="checkbox"/>
IP Address	<span>10 . 12 . 2 . 22</span>	Port	<span>4567</span>	Enable	<input type="checkbox"/>

OK Cancel App.

**[Transcapacity]**

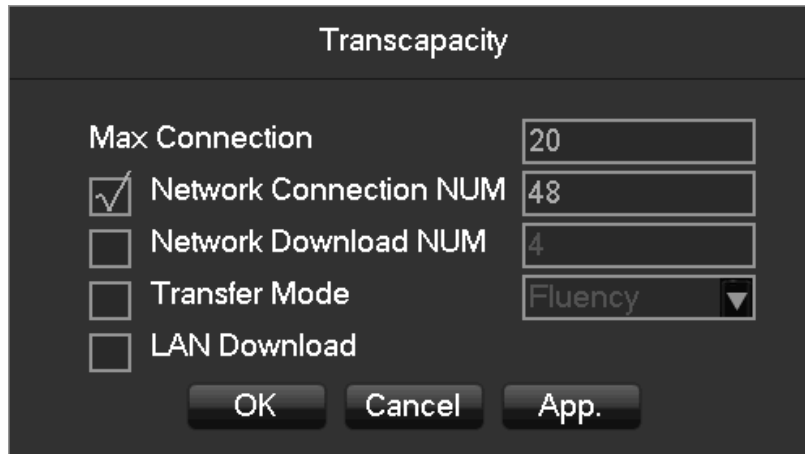

The image shows a 'Transcapacity' settings dialog box. It contains five configuration items, each with a checkbox and a corresponding input field or dropdown menu. The items are: 'Max Connection' with a text box containing '20'; 'Network Connection NUM' with a checked checkbox and a text box containing '48'; 'Network Download NUM' with an unchecked checkbox and a text box containing '4'; 'Transfer Mode' with an unchecked checkbox and a dropdown menu set to 'Fluency'; and 'LAN Download' with an unchecked checkbox. At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'App.'.

Setting	Value
Max Connection	20
Network Connection NUM	48
Network Download NUM	4
Transfer Mode	Fluency
LAN Download	Unchecked


**[Max Connection]** The number of connections: 0-20, if you set 0 means the network does not allow users to connect, the maximum number of connections is 20.

**[Network Connection NUM]** The number of connections defaults to three times the number of channels. Real-time video over the network for browsing, the number of connections depending on network bandwidth, the number greater, the larger the network load, will impact of video playback fluency.

**[Network Download NUM]** The number of connections to download recommendations: 0-8, this need to tick to start this function.

**[Network transmission QOS]** smooth network transmission quality priority or image quality priority or adaptive, depending on the setting, the network adjusts the stream automatically.

## IPC UPnP

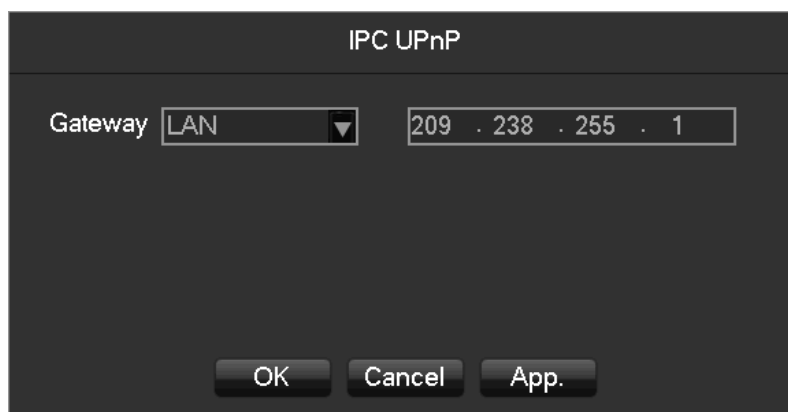


The image shows an 'IPC UPnP' settings dialog box. It features a 'Gateway' label followed by a dropdown menu currently set to 'LAN' and a text box containing the IP address '209 . 238 . 255 . 1'. At the bottom of the dialog are three buttons: 'OK', 'Cancel', and 'App.'.

Field	Value
Gateway	LAN
IP Address	209 . 238 . 255 . 1

To allocate virtual IP address to our IPC. This is the IP segment.

## Security Center

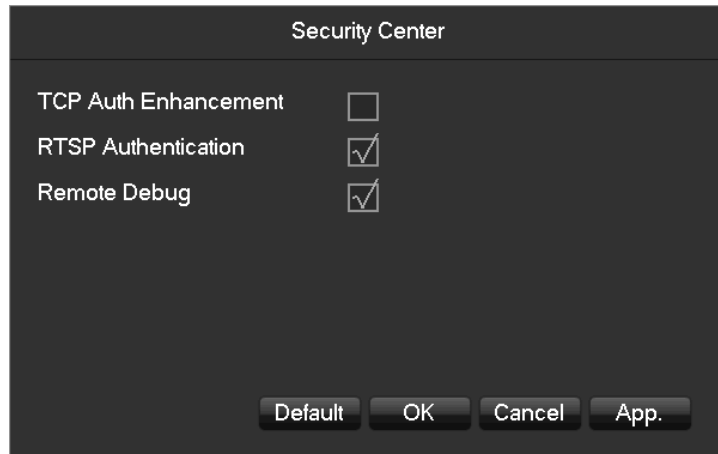

RTSP service, remote debug, TCP auth enhancement switch. Only enable them can work.

### 7.3.3 Event

#### **Alarm Input**

The details refer to 6.4.3.

#### **Alarm Output**

The details refer to 6.4.3.


#### **Abnormality**

The details refer to 6.4.4.

### 7.3.4 Storage


#### **HDD Manage**

Show the HDD space and status.

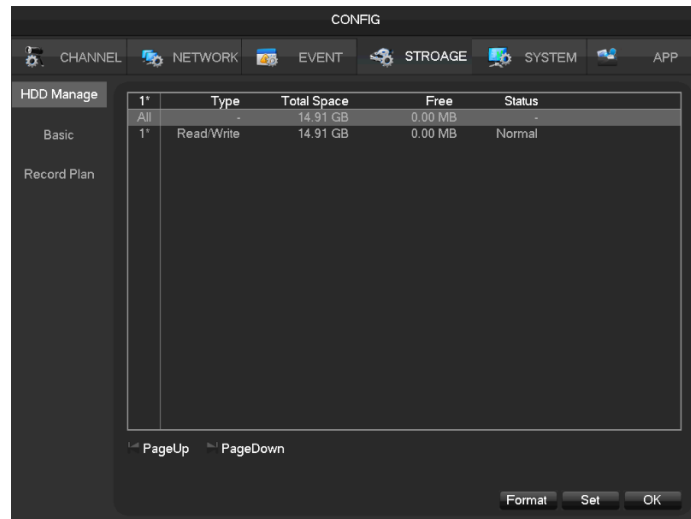


*Note: Hard disk format operation results in the loss of video data.*

**[Set]** Set HDD as read-write, read only or redundancy mode. Video data can be protected from covering under read only mode. It supports HDD S.M.A.R.T smart detection at the same time.

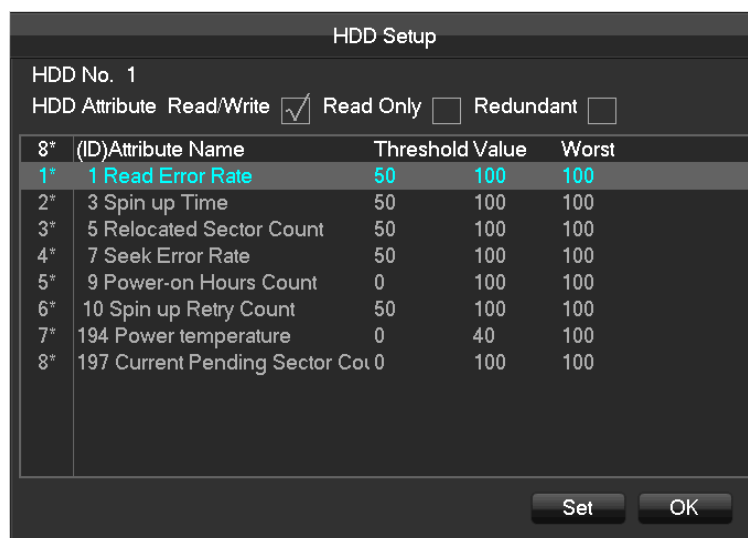

**Basic**

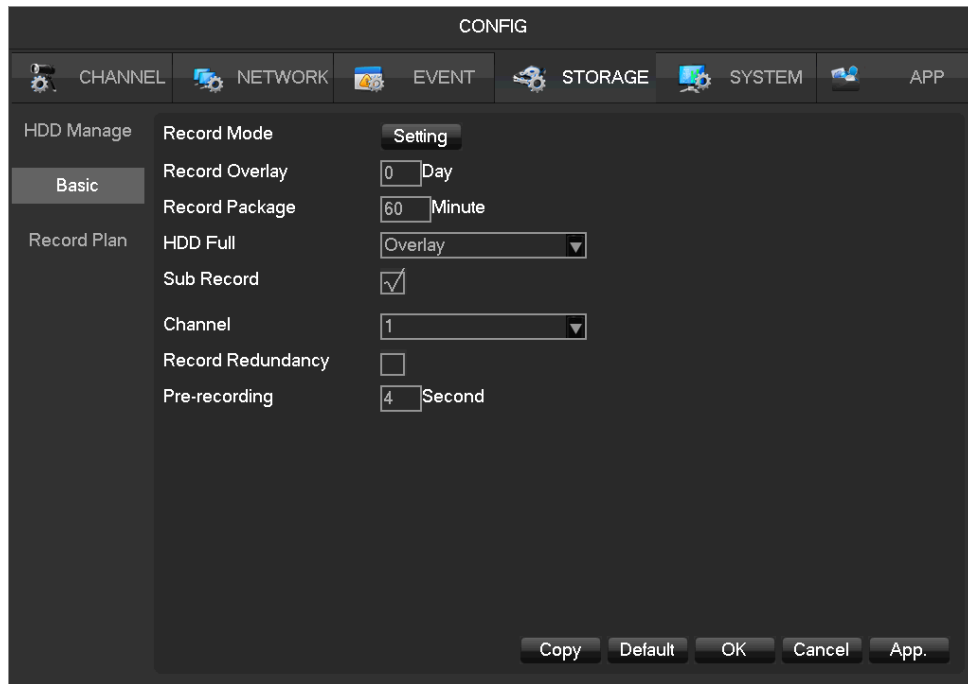

**[Record Mode]** Support three modes, record automatically, manually or not record.

**[Record Overlay]** The range is 0~31.

**[Video Package Time]** The figure is between 5 to 120 minutes.

**[HDD Full]** Overwrite or stop recording.


**[Sub Record]** Sub-stream recording switch. Enable it, then will recording with sub-stream and main stream.

**[Channel]** Select a channel.

**[Video Redundancy]** Open or close the redundant recording.

**[Prerecorded]** The figure is between 0 to 30 seconds.

## Recording plan

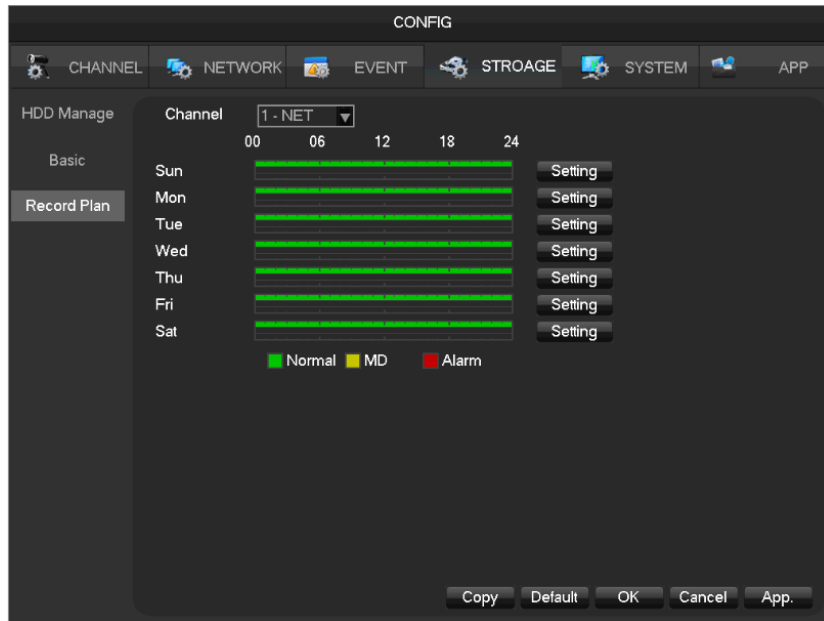

**[Channel]** Select a channel. Green shows normal recording, Yellow shows motion detection, and Red shows Alarm. Users can set or change setting according to date.

**[Copy]** Copy the setting to other channels.

Click **[Set]** and enter into plan editing picture

Record Type	Normal	MD	Alarm
Period 1 00 : 00 - 24 : 00	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 2 00 : 00 - 24 : 00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 3 00 : 00 - 24 : 00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 4 00 : 00 - 24 : 00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 5 00 : 00 - 24 : 00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Period 6 00 : 00 - 24 : 00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

☐ Select All  
☒ Sun ☐ Mon ☐ Tue ☐ Wed  
☐ Thu ☐ Fri ☐ Sat

**[Period]** Set the recording period, there will be 6 period to choose.

**[Regular]** Regular recording.


**[MD]** Motion detection recording.

**[Alarm]** Alarm recording.

## 7.3.5 System Configuration

### Basic setting

Get into the **[Basic]** menu under **[Configuration]**

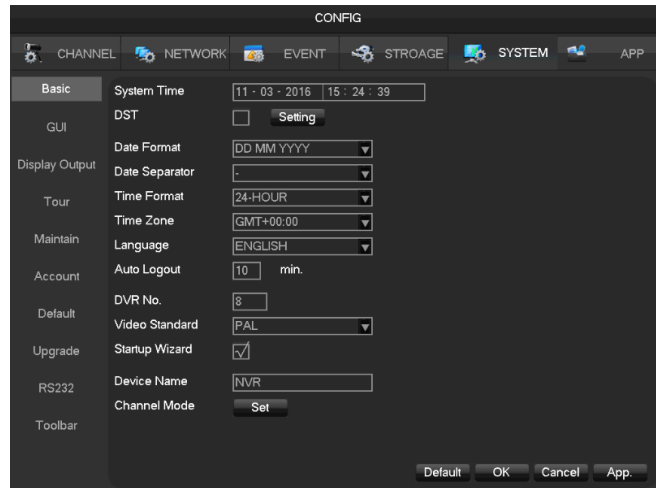

The screenshot shows the CONFIG menu with the SYSTEM tab selected. The left sidebar lists various settings categories: Basic, GUI, Display Output, Tour, Maintain, Account, Default, Upgrade, RS232, and Toolbar. The Basic settings section is expanded, showing the following options:

- System Time: 11 - 03 - 2016 15 : 24 : 39
- DST: ☐ Setting
- Date Format: DD MM.YYYY
- Date Separator: -
- Time Format: 24-HOUR
- Time Zone: GMT+00:00
- Language: ENGLISH
- Auto Logout: 10 min.
- DVR No.: 8
- Video Standard: PAL
- Startup Wizard: ☒
- Device Name: NVR
- Channel Mode: Set

At the bottom right of the CONFIG menu, there are buttons for Default, OK, Cancel, and App.

**[System Time]** set the HD record system time.



*Note: please click the "save" button to save the time after setting.*

**[Daylight Saving Time (DST)]** Enable the function and click "Set" to enter the local DST starting and ending time setting.

**[Date Format]** Modify the date display format.


**[Date Separator]** Select the separator for date.

**[Time Format]** 24 hour or 12 hour display mode.

**[Time Zone]** Select the time zone.

**[Language]** Select language (different models have different language choice).

### GUI Display

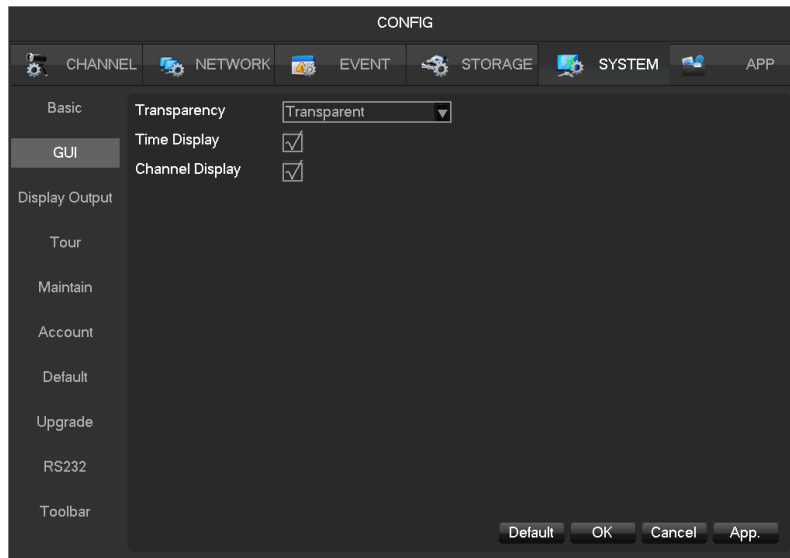


**[Menu Transparency]** Adjust menu transparency , four degrees

**[Time Display]** Enable switch for time displayed in live view

**[Channel Display]** Enable switch for channel name displayed in live view

## Display Output

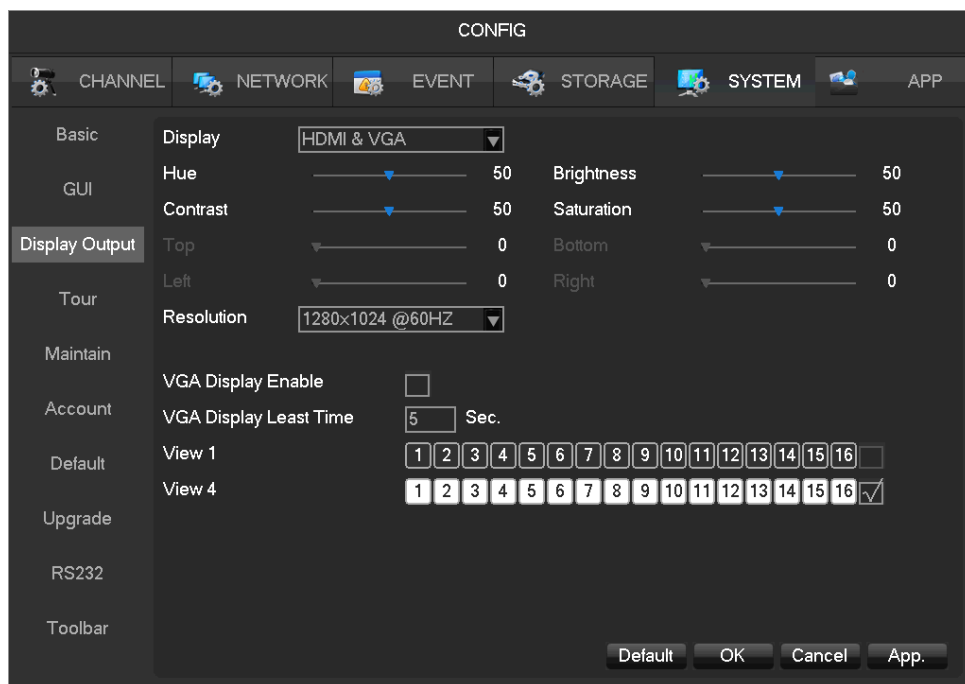

**[Display]** CVBS/HDMI&VGA

Under CVBS mode, user can adjust the monitor or TV hue, brightness, contrast and saturation. You can also adjust the right TV output area when the displayed image is not full or beyond the scope of the monitor. Under HDMI&VGA mode, user can only adjust the monitor hue, brightness, contrast

and saturation.

**[Resolution]** Select the VGA output resolution and refresh rate.

**[VGA Display Enable]** Enable it, then VGA and HDMI will display different image.

**[VGA Display Least Time]** Tour interval time, the value range is 5-120sec. The alarm information linkage to VGA auxiliary output need to enable single-screen or four-screen display.



*[VGA Display Enable] feature only for special models, the device you have may not support, please prevail in kind.*

## Tour

CONFIG

CHANNEL NETWORK EVENT STORAGE SYSTEM APP

Basic Enable Tour ☐

GUI Interval 5 Sec.

Display Output View 1 1 2 3 4 5 6 7 8

View 4 9 10 11 12 13 14 15 16

Tour View 4 1 2 3 4

View 9 1 2

Maintain View 16 1

Account Motion Tour View 1

Alarm Tour View 1

Default

Upgrade

RS232

Toolbar

Default OK Cancel App.

**[Enable Tour]** Enable switch.


**[Interval]** Tour interval time is 5-120s.

**[View]** It includes single screen, four-, nine-, sixteen-screen.

**[Motion Tour]** Set the motion detection tour mode.


**[Alarm Tour]** Set the alarm tour mode.

## Maintain

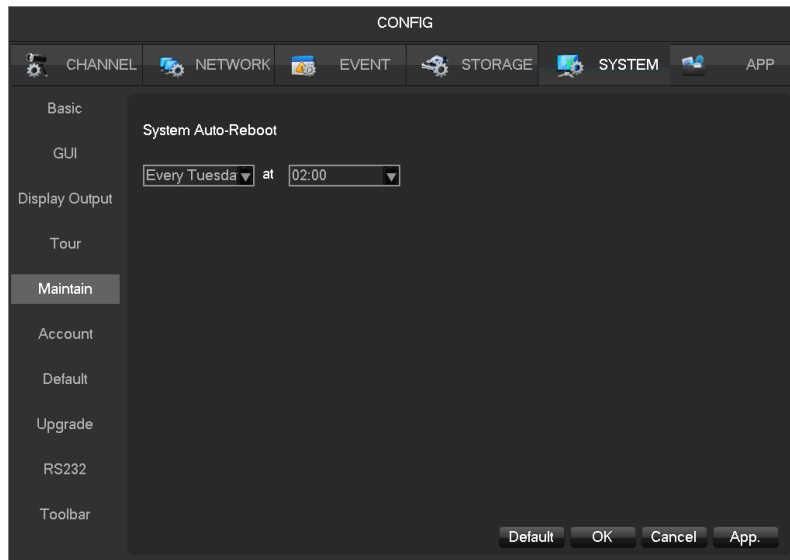

**[Auto maintain]** Set the desired the project of automatic maintenance.

## Account

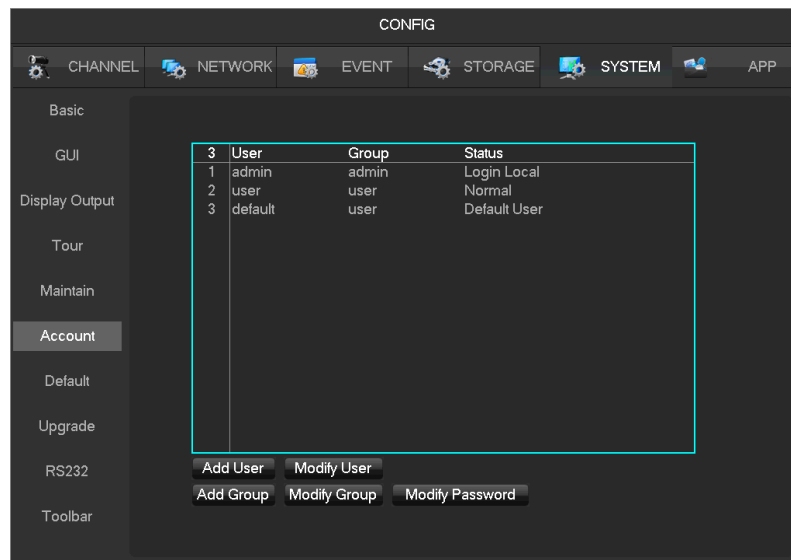

**[Add User]** Increase users within the group and settings user access control.

**[Modify User]** Modify the user and settings user access control.

**[Add Group]** Add group and settings group access control. Enter into the menu interface of Increase the group, determine the group name, select 83 access control, left click mouse button to confirm, save the new user group.

**[Modify Group]** To modify the group attribute which already exists.

**[Modify Password]** To modify password.

Select the user, enter old password then enter new password and confirm

Click **[confirm]** button to make sure modify password.

The password can be set 1-6. Beginning and ending spaces is invalid password, you can have a space in the middle.


Users which has User Account Control permission can change their own passwords, can also modify other users' passwords.



- *The following user names and user group names, etc., character and length consisting up to six bytes, the invalid string is trailing spaces. Legal characters: letters, numbers, underscores, minus sign, point, other characters are not allowed to use.*
- *the number of users and groups is not limited, User Group increased or delete according to user-defined: The factory settings are user \ admin two groups. Users can set their own related group, the group of users can be freely re-assign permissions at the group permissions.*
- *user management using two methods of user and group, , Group name and the user name cannot be repeated, , each user must belong to a group, a user can belong to only one group.*
- *There are three users: admin, user, and hidden default initialization. The factory password for first two are 123456. Admin default user permissions are high at the factory, and the factory default user as a low privileged user, only for monitoring, playback.*
- *Hidden default: This user system for internal use and cannot be deleted. When local is in "no user is logged" state, the system will automatically log in with this account. Users can modify this account permission to do what free login can do.*
  - *Enter to the menu interface of increase user, Enter your user name and password, select belongs to which group, and select whether to reuse this user. Reuse means that the account can be used simultaneously, multiple clients can use the account. .*

*Once the group belongs selected, the user's permissions only a subset of the group, not ultra vires the properties of the group.*

## **Default**

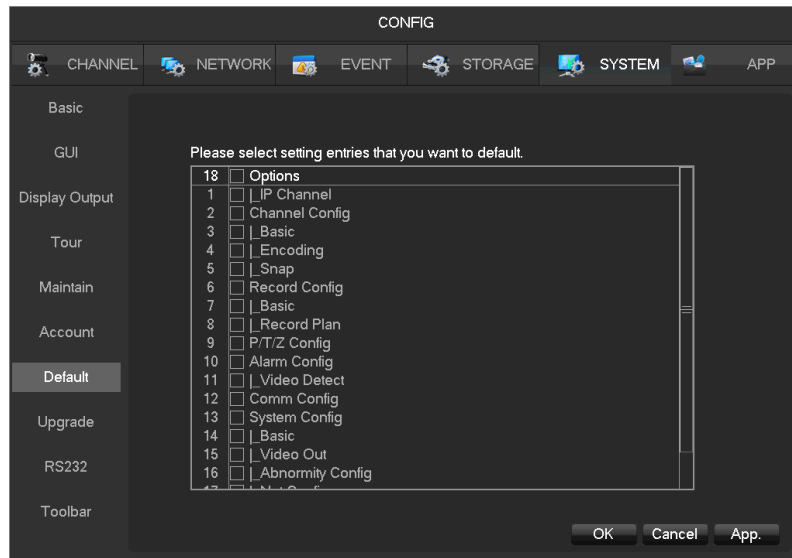


System back to the default configuration factory state (specific items recovered optional)



*Menu color, language, time and date format, video format, IP address, user accounts and so on will not be restored.*

## Upgrade

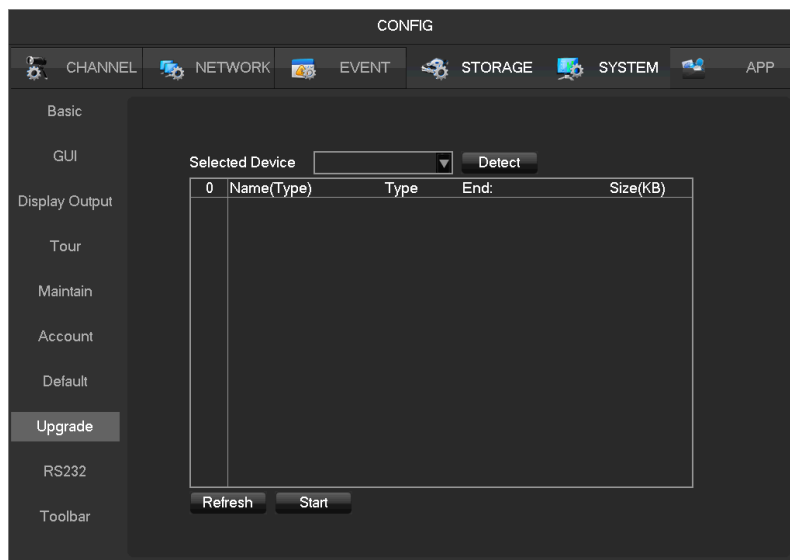


System software can be upgraded: Insert a USB storage device, click Upgrade.



*System upgrade may cause the DVR can not start properly, please Operation under the guidance of the company's technical staff.*

## RS232

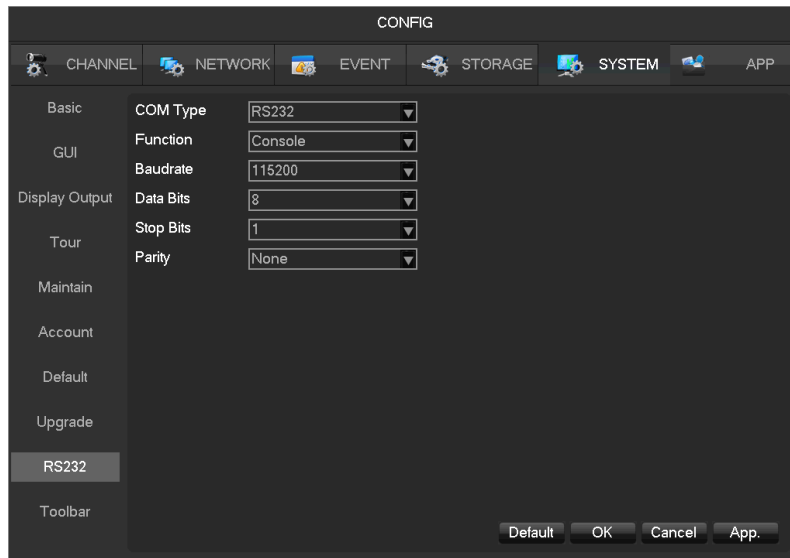

**[Function]** Select the appropriate serial protocol.

**[Regular]** Used to update firmware and adjust.

**[Keyboard]** Used specialized keyboard to control the device by serial port.

**[Transparent serial port]** Used to transmit serial port data transparently.

**[Net keyboard]** Use specialized keyboard to control the device through network.

**[PTZ]** Connect with matrix.



*Note: some models do not have RS-232 serial port, please refer to some relative data sheet.*

**[Baudrate]** Select the relative length of baud rate.

**[Data Bits]** Default: 8.

**[Stop Bits]** Default: 1.

**[Parity]** Default: None.

## 7.3.6 APP Center

### DDNS

Dynamic DNS is a kind of system which point internet domain name to variable IP. According to the rule of internet domain name, domain name must associate with the fixed IP address. Dynamic DNS provide a fixed Name server for the dynamic domain, and then guide the domain search to the IP address of dynamic user through Name server, which can make the outside user connect to the dynamic user's URL.

CONFIG

CHANNEL NETWORK EVENT STORAGE SYSTEM APP

DDNS

DDNS Type: NO-IP DDNS ☐ Enable

Domain Name:

User Name:

Password:

Server IP: 8.23.224.120

Port: 8245

Status: Not Connected...

OK Cancel App.

## 1、FNT DDNS

FNT DDNS is built-in professional dynamic DNS service in our network DVR. You can register directly in the device .Specific steps are as following.

[Main menu]-[APP]-[DDNS], choose **FNT DDNS**.

- 1: Select FNT DDNS and Enabled it.
- 2: Input one user name, there will be a domain name generated auto. Domain name = user name.faceaip.net.
- 3: Input the password
- 4: Click “Register” button. If the domain name is not registered, it will pop up a message that connect DDNS server successfully otherwise it will prompt that the registration is failed.



*Suggestion: you’d best change the DNS server in basic configuration to the router’s DNS server*

- 5: Click the “ok” button to complete the settings.

## 2、No-IP DDNS

Register new account at [www.no-ip.com](http://www.no-ip.com).

### Embedded DVR/NVR Setting:

Open [Main Menu]-[APP Centre]-[DDNS], choose NO-IP DDNS.

Refer to the following configuration:

Name	Configuration
DDNS type	NO-IP DDNS
Host IP	<a href="http://dynupdate.no-ip.com">dynupdate.no-ip.com</a>
port	80

Domain name	xxx.xxx.org (xxx: domain name created)
User name	xxx (user name registered)
password	xxxxxx (password registered)

### 3、Dyn dns DDNS

Register new account at [www.dyndns.com](http://www.dyndns.com).

#### Embedded DVR/NVR Setting:

Open [Main Menu]-[APP Centre]-[DDNS], choose NO-IP DDNS.

Refer to the following configuration:

Name	Configuration
DDNS type	Dyndns DDNS
Host IP	Members.dyndns.org
port	80
Domain name	xxx.xxx.com (xxx: domain name created)
User name	xxx (user name registered)
password	xxxxxx (password registered)

### Email

The screenshot shows the CONFIG menu with the following tabs: CHANNEL, NETWORK, EVENT, STORAGE, SYSTEM, and APP. The DDNS section is expanded, showing the Email settings. The settings are as follows:

Setting	Value	Option
SMTP Server	MailServer	<input type="checkbox"/> Enable
Port	25	
User Name		
Password		
From		
Title	DVR ALERT	
Receiver		
Receiver		
Receiver		
Event Interval	0	Sec. SSL Enable <input type="checkbox"/>

Buttons: Test, OK, Cancel, App.

Refer to 9.1.8 Send Email.

### P2P

CONFIG

CHANNEL NETWORK EVENT STORAGE SYSTEM APP

DDNS Enable OPEN

Email Transfer Mode None

Account Reuse ☒

P2P Device ID 0020eeff

Password n1qr09

Local Port 3000

P2P Server URL http://www.vssweb.net

Status Online Ping

NAT Server Address 123.57.17.73

OK Cancel App.

**[Enable]** Open/Close P2P function.

**[Transfer Mode]** Network transfer strategy, choose Quality priority or Fluency priority.

**[Account Reuse]** Enable it supports multiple users log in the same device.

**[Device ID]** Display device ID.

**[Password]** Device password.

**[Local Port]** Set local port.

**[P2P Server URL]** P2P server URL.

**[State]** Current connection state.

## Cloud Storage

CONFIG

CHANNEL NETWORK EVENT STORAGE SYSTEM APP

DDNS

Email ☐ Baidu ☐ Dropbox ☐ Google Drive

P2P Upload Path

Cloud Storage

Push

Channel 1 - NET

CloudStorage ☐ Snapshot ☐ Select

Motion Detect ☐ Local Alarm ☐ Face ☐ Perimeter ☐ IP Channel

Copy OK Cancel App.

Refer to 9.1.10 Send Cloud NetDisk.

## Push

CONFIG

CHANNEL NETWORK EVENT STORAGE SYSTEM APP

DDNS

Email

P2P

Cloud Storage

Push

Message ☒

Picture ☒

Time Lag 60s Test

Push Info

Event External Alarm Emergency Level Middle

Device Status Device Start High

OK Cancel App.

Refer to 9.1.9 Push Server.

# 8 WEB Access

## 8.1 WEB Operation

### 8.1.1 Network Connection

Check whether the DVR is on the network by checking B-Lamp on front panel, light indicates connection, otherwise connection error.

Set IP, subnet mask and gateway for computer and DVR. Please assign the same segment IP address without router, need to set the appropriate subnet mask and gateway with router.


The detail of DVR network configuration please see **[Configuration]-[Network Setting]**.

Ensure the IP is correct and check whether the DVR is on the network by using the Windows command “ping”.


## 8.1.2 The control installation and the user login logout

Users can remote access to DVR by Internet Explorer, assuming you have a correct network configuration.


The following interface will pop up when you access the IP address in Internet Explorer.

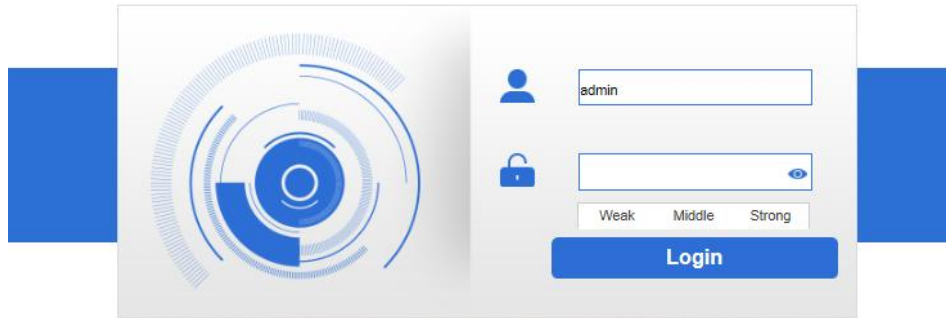

The following interface will pop up when you log in.

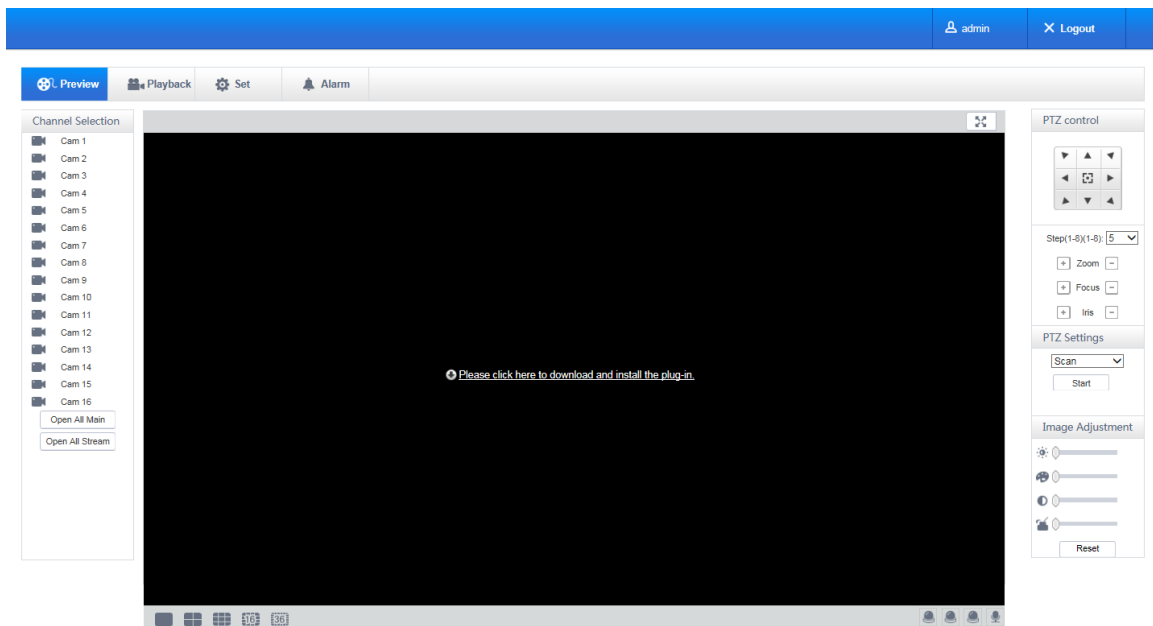


Will be displayed in Compatibility View option is checked on all websites.

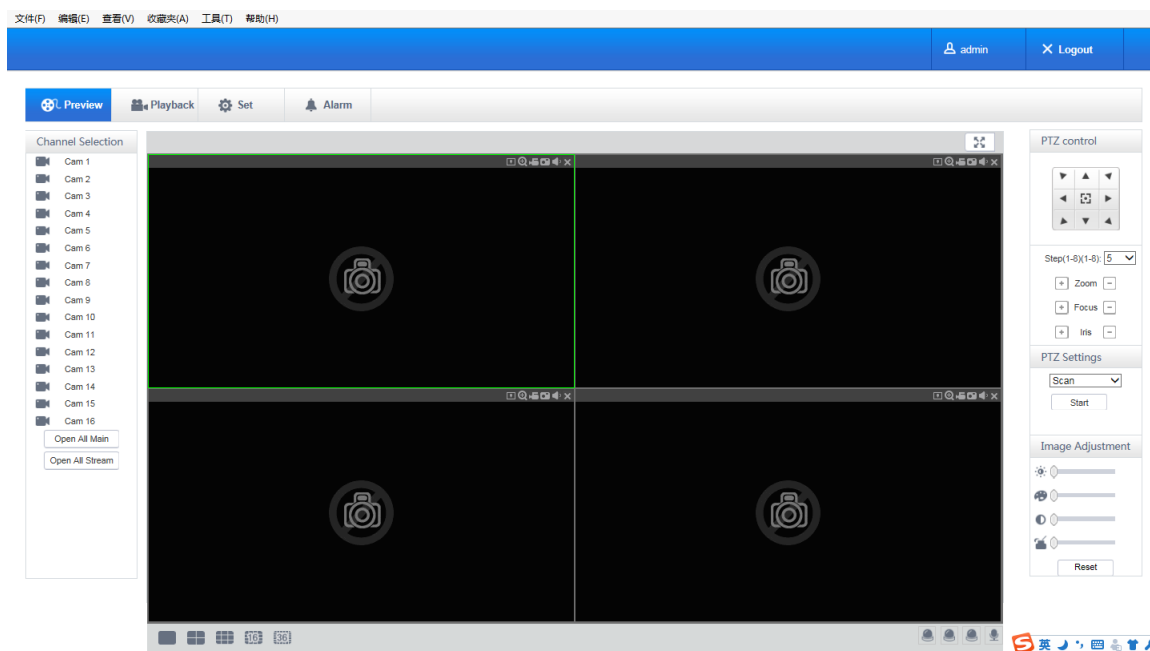

### 8.1.3 The Interface of Web Operations

#### WEB Interface Description

After log in the web, the preview interface will pop as following:

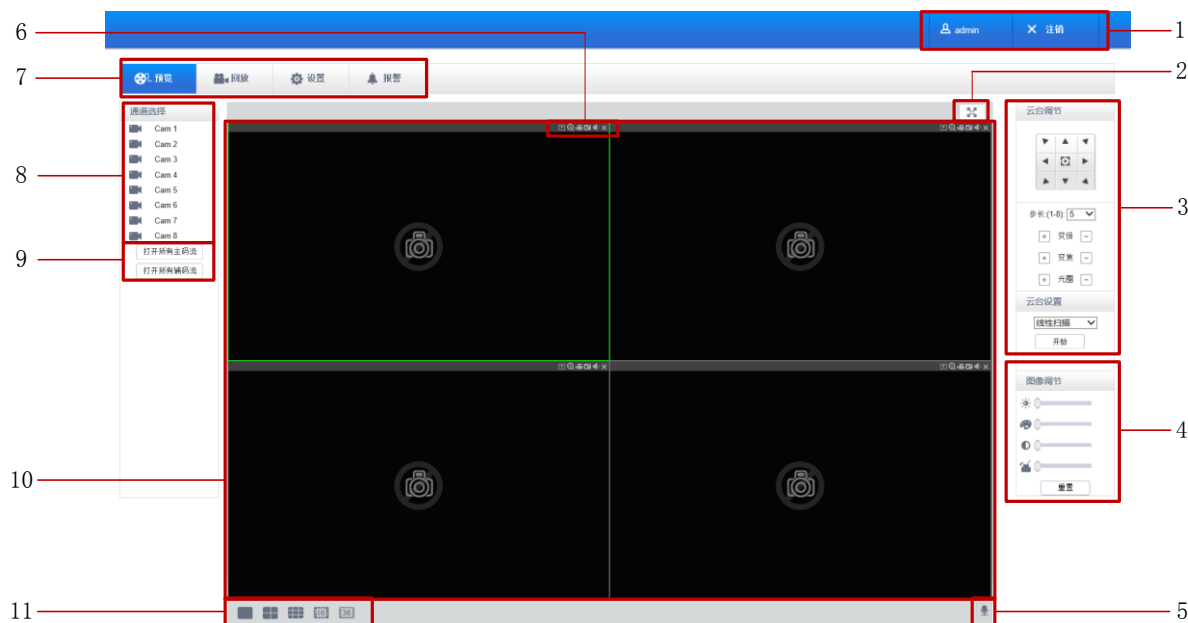

WEB Interface  
Description

Index	Name	Description
1	Log out	Show the current login user, click on log out
2	Full Screen	Full screen preview
3	PTZ control	PTZ control menu


4	Image color & other saturation	Image color: modify brightness, contrast and Other: set capture path, record download path and reboot
5	Device function key	Two way talk function key and etc.
6	Channel function key	screenshots, electronic amplification function keys and etc
7	Menu	System configuration, record search, alarm setting, exit, etc.
8	Channel Selection	Realtime channel preview selection
9	All open key	Open all can be open all channels real-time monitoring (main/auxiliary stream) in the video monitoring window
10	Surveillance window	Real time recording or playback
11	Channel segmentation window	Provide the single picture, 9, 4 picture image segmentation method.

### Select the focus window

Into the WEB interface, select the focus window in live window, the focus window has a light green border.


### Preview Channel Selection

The left channel column is as following picture:

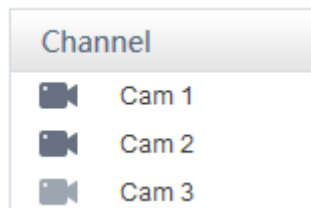

Left-click on any channel, the focal channel open with the main stream, and channel focus automatically moves to the next channel.

After opening the live video, the left channel column is as following picture:

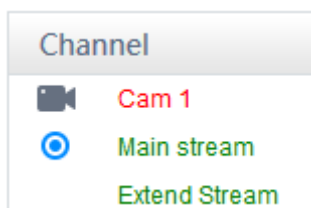

### The Real-time Monitoring



Preview window's Lower left corner shows the current video channel name.

Preview window's Upper right corner shows the current video time information.

Upper left corner shows the current DVR's IP, resolution, bit rate.

Upper right corner shows the function keys.



Smart Information: Show the intelligent analysis information.



Local Range: Video images can be enlarged.



Local Record: Save and record video to a local HDD while in a live view. Set recording path in configuration.



Capture: capture of the present channel, set the path in "other.




Audio: on/off sound.



Close video: off the focus window video.

## Screen split

Click “” (Lower left corner of the display window) to switch between single screen and multi-screen.


## PTZ Control

Set protocol (see **[Setting]-[PTZ]**)

Control PTZ direction, step size, zoom, IRIS, preset, tour, pattern, border scan, light, wiper, auto pan, etc.

Step size controls PTZ direction and speed, e.g. step size 8 is moved faster than step size 1.

Eight direction rotations: up, down, right, left, up-left, up-right, lower left, lower right.

The image shows a PTZ control interface. At the top is a header 'PTZ control'. Below it is a 3x3 grid of directional buttons: up, down, left, right, and four corner buttons (up-left, up-right, down-left, down-right). The center button has a square icon. Below the grid is a label 'Step(1-8)(1-8):' followed by a dropdown menu showing '5'. Underneath are three pairs of buttons: '+ Zoom -', '+ Focus -', and '+ Iris -'. Below these is a section header 'PTZ Settings'. Under this header is a dropdown menu showing 'Scan' and a 'Start' button.

### **Border scan**

Operation: select the camera line scan of the left/right margin by direction button, and click the Settings button in the left /right margin position to determine the left border.

### **Preset**

Operation: modify preset position by direction button and inputting a preset number, then click “Add” to save.

### **Tour**

Operation: select “Tour”; Point between the first cruise line cruise input box value. And input numbers in “Path” and “preset”. Click[**Add Preset**]to add one preset in the cruise path, and repeat to add additional presets. Click [**Clear Preset**]to delete a preset, repeat to delete more.

### **Pattern**

Operation: Click “Pattern” in order to record an automated pattern. Then, go back to the PTZ controls in order to modify the zoom, focus and IRIS, etc. Stop recording in “Pattern” setting to save the pattern.

### **AUX**


On/off one of AUX.

## Wiper

On/off wiper under protocol.


### 8.1.4 Configuration

Access DVR local configuration menu by click “System Setting”, the further details please refer.  
[Local operation guide]

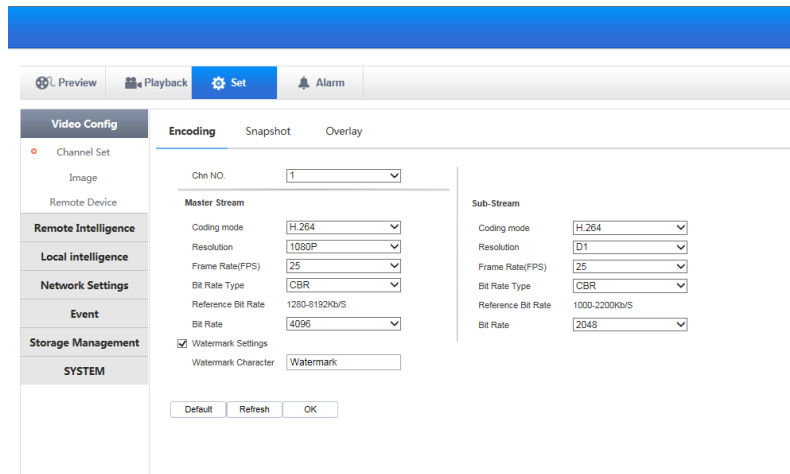

### 8.1.5 Search Record

Click [Playback] to open the search interface:

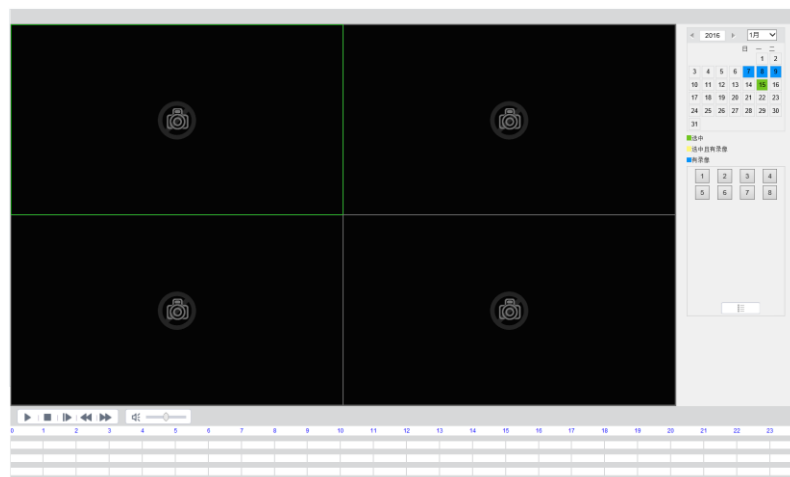

Up to playback 4 channels simultaneously.

## Search record

By selecting the record type, start and end times, and click the check button, get a list of files on the DVR.

Select the appropriate file and download can be played


## Play

Double click a search result to play in video window. Control the playing video by the control keys on the bottom. At this point, the bottom of the video window will display the video control buttons, video playback can be controlled.




## Download

Select a searched video to download to local. The download speed and percentage are displayed on the bottom of the screen.

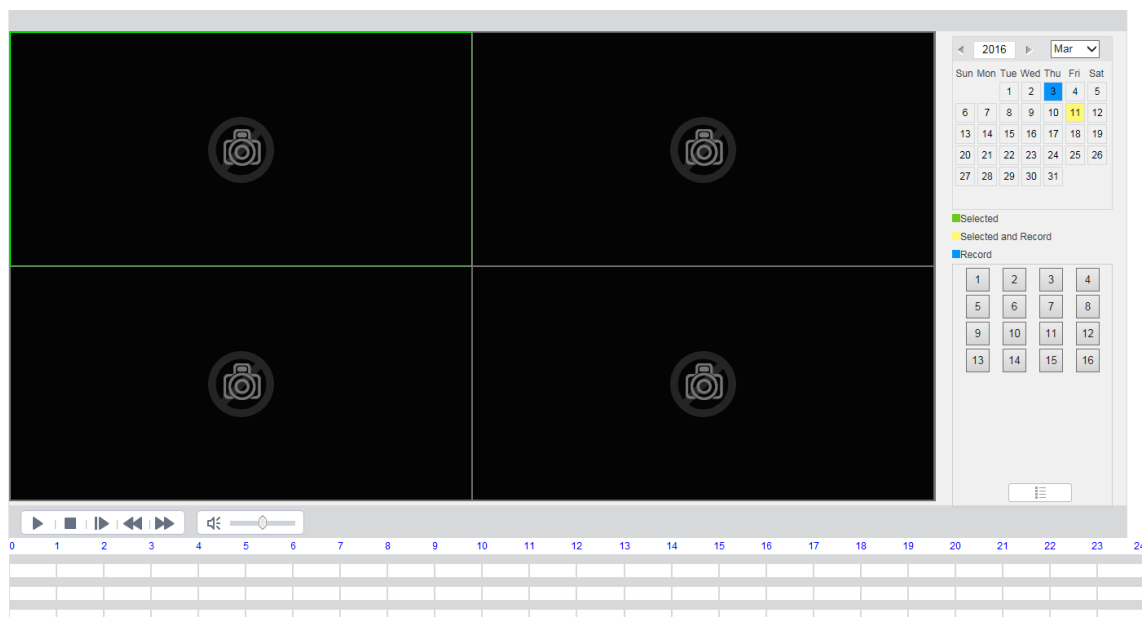

## 8.1.6 Alarm Configuration

Click the [Alarm] to enter the alarm setup menu:

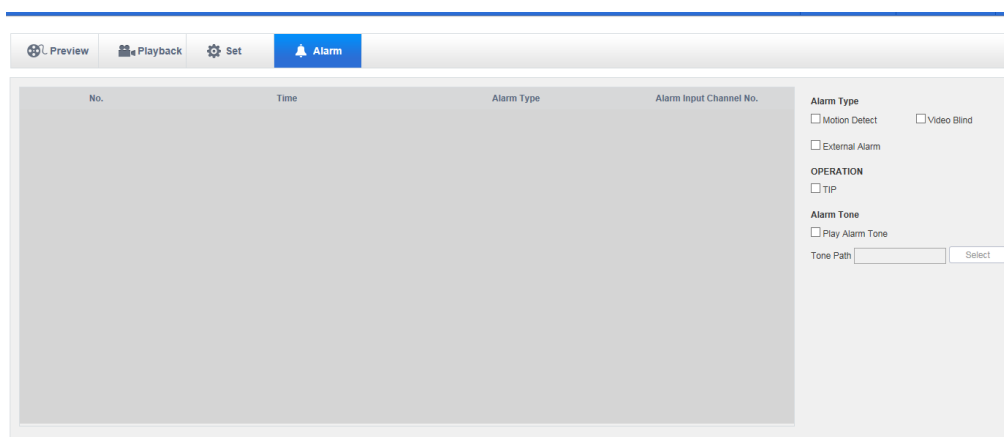

If need warning message displayed and real-time pop up on the WEB interface, open the **[monitor alarm]**, and select the appropriate type of alarm.

Choose type of alarm on menu, monitor video loss, motion detection, disk full, disk error, video mask, external alarm.

Click **[Video Pop-up]**, open the video loss, motion detection, hard disk full, hard disk failure, video block, video encoder alarm pop-up linkage.


Click **[prompt]**open the prompt: When an alarm occurs in real-time monitoring will popup alarm window menu.

Click **[Sound Pop-up]**, you can choose alarm tone pre-recorded on the local hard drive when an alarm occurs, tone file in WAV format.

## 9 Appendix

### 9.1 Alarm linkage setting

Alarm linkage settings interface as following.

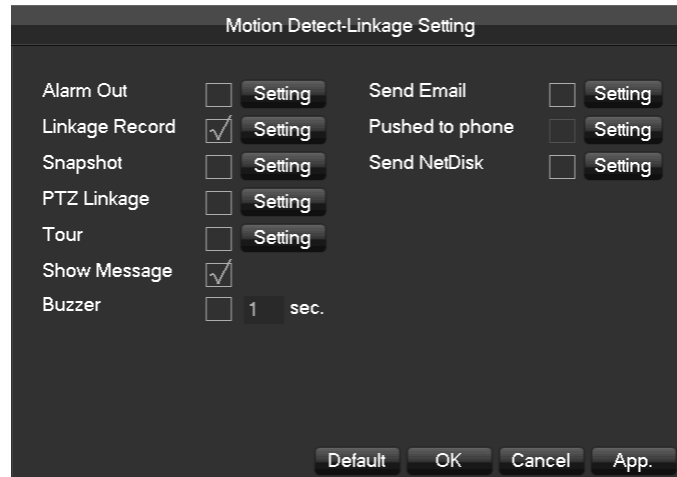

The 'Motion Detect-Linkage Setting' window contains two columns of settings. Each setting has a checkbox and a 'Setting' button. The first column includes 'Alarm Out', 'Linkage Record' (checked), 'Snapshot', 'PTZ Linkage', 'Tour', 'Show Message' (checked), and 'Buzzer' (set to 1 sec.). The second column includes 'Send Email', 'Pushed to phone', and 'Send NetDisk'. At the bottom are 'Default', 'OK', 'Cancel', and 'App.' buttons.

Setting	Value
Alarm Out	<input type="checkbox"/> Setting
Linkage Record	<input checked="" type="checkbox"/> Setting
Snapshot	<input type="checkbox"/> Setting
PTZ Linkage	<input type="checkbox"/> Setting
Tour	<input type="checkbox"/> Setting
Show Message	<input checked="" type="checkbox"/> Setting
Buzzer	<input type="checkbox"/> 1 sec.
Send Email	<input type="checkbox"/> Setting
Pushed to phone	<input type="checkbox"/> Setting
Send NetDisk	<input type="checkbox"/> Setting

#### 9.1.1 Alarm Out

Linkage the device alarm through the interface as following:




The 'Alarm Out' window shows 'Alarm Out' with three buttons labeled 1, 2, and 3. Below it, 'Latch' is set to 10 sec. 'OK' and 'Cancel' buttons are at the bottom.

Support 10s-300s alarm-delay.

#### 9.1.2 Linkage Record

Video channel linkage.

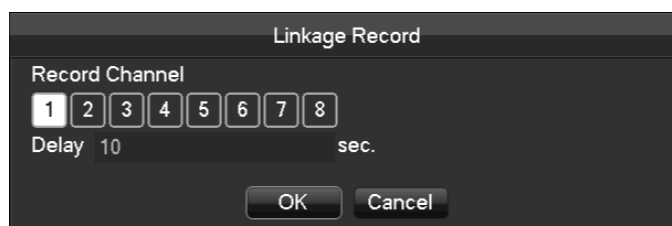


The 'Linkage Record' window shows 'Record Channel' with eight buttons labeled 1 through 8. Below it, 'Delay' is set to 10 sec. 'OK' and 'Cancel' buttons are at the bottom.

Support 10s-300s alarm-delay.

### 9.1.3 Snapshot

Screenshots through channel linkage as the interface following:

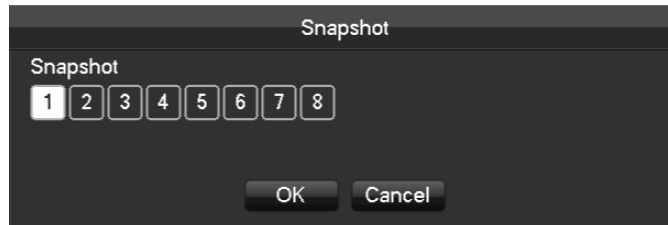


Configure the screenshots by setting [main menu]-[screenshot setting].



*If the access channel is the network channel , please check if the screenshot function is open of the camera.*

### 9.1.4 PTZ Linkage


Preset position, cruise, trace by setting the PTZ linkage.

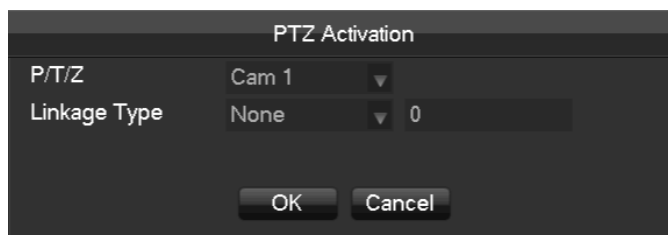

Preset position, cruise, trace by setting the PTZ configuration. See details on page 6.6.2.

### 9.1.5 Tour

Select the round tour channel when the alarm occurs, select the single channel to the round tour.

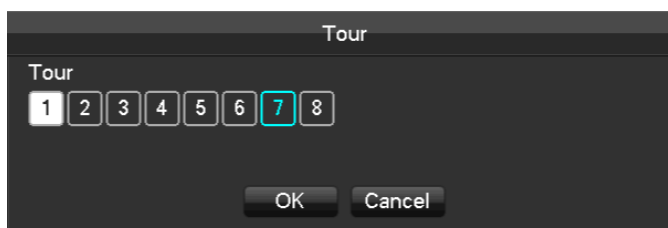

### 9.1.6 Show Message

Select the prompt to open the screen, if it occurs alarm, the preview screen will pop up the prompt as following:

Alarm Status																	
Alarm In	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	
Video Lost	1	2	3	4	5	6	7	8									
Mask	1	2	3	4	5	6	7	8									
Motion	1	2	3	4	5	6	7	8									
Network	<input type="checkbox"/>	<input type="checkbox"/>															
IP Conflict	<input type="checkbox"/>	<input type="checkbox"/>															

### 9.1.7 Buzzer

Select the buzzer, the buzzer can last 1s-600s.

### 9.1.8 Send Email


Email configuration interface is as following:

CONFIG					
CHANNEL	NETWORK	EVENT	STORAGE	SYSTEM	APP
DDNS	SMTP Server <input type="text" value="MailServer"/> <input type="checkbox"/> Enable Port <input type="text" value="25"/> Anonymous <input type="checkbox"/> User Name <input type="text"/> Password <input type="text"/> From <input type="text"/> Encryption <input type="text" value="None"/> <input type="button" value="v"/> Title <input type="text" value="DVR ALERT"/> Receiver <input type="text"/> Receiver <input type="text"/> Receiver <input type="text"/> Event Interval <input type="text" value="0"/> Sec.				
Email					
P2P					
Cloud Storage					
Push					
<input type="button" value="Test"/>					
<input type="button" value="OK"/> <input type="button" value="Cancel"/> <input type="button" value="App."/>					

Configure the SMTP server, IP address, ports, user name, password and the email address of the sender, SSL/TLS encrypt the email, and support sending anonymous messages. The title of the email can support English and the Arab number, the maximum input characters reach as much as 32 characters.

## 9.1.9 Server Push

Server push configuration interface as following:



**[Send Message]** Open or close the mobile phone message sending.

**[Image Attachment]** Open the function of image attachment.

**[Time Lag]** Set the time lag of the message sending, 60s/90s/120s is optional.

**[Test]** Click Send to test the message sending function

**[Event]** Open or close the event sending, the events including external alarm, face detection, perimeter intrusion detection.

**[Device exception]** Open and close the device exceptional sending, the exception including the device startup, no hard dick, error hard dick, start recording/stop recording.


**[Urgency Degree]** The message sending level can be divided into High/Medium/Low level.

## 9.1.10 Send NetDisk

Choose Baidu cloud disk, Dropbox, Google one, according to clew for binding.

Support motion detection, video occlusions, local alarm (face/perimeter ) alarm and other alarm types.

Can linkage other channels to upload the captured pictures

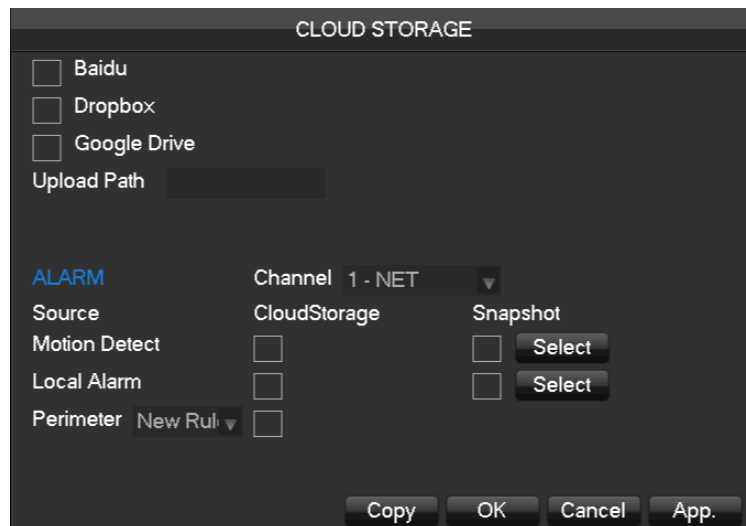

## 9.2 Port Mapping

Port mapping is mapping a port of outside web host's IP address to a machine inside web, and provide the service. When user connects to the port of the IP, the server will automatically map the request to the corresponding machine inside LAN. With this function, we can map many ports of a machine's IP address to different machines' different ports inside web.

The port mapping can also have other special agent functions, like POP, SMTP, Telnet and so on. Theoretically, it can provide more than sixty thousand ports. For example, if we want to map a web server which has an IP address of 192.168.111.10, we just need to input the IP address and TCP port 80 into the port mapping chart of the router.

There are two ways to map the port: UPnP function automatically map and modify the router's port mapping chart by manual.

### 9.2.1 UPNP Function

In order to get connection to the Embedded DVR through Public network, we need to set the Router to cross the NAT of Embedded DVR. UPnP can make the NAT cross automatically by the UPnP agreement of Embedded DVR, and don't have to set the Router.



*To realize the UPnP Function, there must be Router support and enable the UPnP Function.*

#### **The first step**

Connect the Router to the network, get to the Menu of the Router, set the Router, and enable the UPnP

Function.

Routers made by different manufacturers may have some difference, please refer to the specification carefully before setting the Router.

#### **The second step**

Connect the Embedded DVR to the Router; the configuration will automatically gain the IP address or static IP. After setting up the IP, click the Advanced. And get to the XXX, ports and multicast etc. choose to open the Enable at the **[UPnP port mapping]**

#### **The third step**

Enter into the Router management interface; detect the port if there is already a Port mapping. If there is, it shows UPnP setting's finished.

#### **The forth step**

Input the IP address in IE, and add port number of the Embedded DVR, for example: 155.157.12.227:81. If you want to enter by the Client Software, use the TCP port offered by the outer net.



*If there are a few embedded DVRs need to set the UPnP function, in order to avoid IP conflict, set the ports of embedded DVR into different ports numbers. Otherwise, it will choose the embedded DVR port set preceded as the first choice.*

## **9.2.2 Port mapping Manually**

#### **The first step**

Connect the Embedded DVR to the Router, set the static IP.

#### **The second step**

Log in Router, enter into the configuration menu of Router, and set the menu. Then get to port, set the IP distributed by the Embedded DVR, and set the rule of port mapping, add HTTP and TCP port into mapping list.

Default access ports of Embedded DVR include HTTP port 80 and TCP port 8000, if the ports are occupied by the other device, please modify the default port of the Embedded DVR into other vacant ports.

#### **The third step**

Input the public net IP address in the IE, and add the port number of the Embedded DVR you want to access after the IP, for example: http://155.157.12.227:81. If you want to access by Client Software, you can use the outer net TCP port directly.



*For detail configuration setting, please refer to the user manual of Router.*

## 9.3 Voice Intercom

### 9.3.1 Summarize

Embedded DVR Bidirectional Talk: user can talk to remote client software or Web via DVR audio input and output ports; user can listen voice from Client Software and WEB via DVR audio output ports.

Two types of bidirectional talk ---- sharing and standalone ----for different models, exact info please refer to specifications.

### 9.3.2 Configuration

#### **Local configuration**

Connect a microphone to the MIC input port, connect loudspeaker to the audio output port.

If no standalone MIC input port, please connect microphone to the number 1 audio input port



*Local output needs active audio output device.*

#### **Remote PC Configuration**

Connect microphone and loudspeaker to computer.

Enable bidirectional talk in IMS software or WEB.

## 9.4 HDD S.M.A.R.T

### **S.M.A.R.T: “Self-Monitoring, Analysis and Reporting Technology”**

S.M.A.R.T HDD can analysis head, disc, motor, circuit operation, history and default security values via monitor instruction in HDD and surveillance software in host. Alarm will be sent to user automatically when the value is outside the scope of the security situation.

Detection parameters of Seagate HDD for example are divided into seven: ID detection code, Attribute Description, Threshold, Attribute Value, Worst, Date, and Status.

## 1、 ID detection code

ID detection code is not the only; manufacturer can use different ID code or increase or decrease its quantity according to the detected parameter's quantity.

For example: the ID detection code of WEASTERN DIGITAL's product is "04", parameter is Start/Stop Count, but the parameter of same code in Fujitsu's product is "Number of times the spindle motor is activated".

## 2、 Attribute Description

Attribute Description: name of detection item. Manufacturer can increase or decrease. As ATA standard update constantly, sometimes different models in same brand maybe different ,but must ensure major test items specified in S.M.A.R.T .(although different manufacturers have specific naming convention ,the essence of monitoring is the same.)

1 Read Error Rate

2 Spin up Time

4 Start/Stop Count

5 Relocated Sector Count

7 Seek Error Rate

9 Power-on Hours Count

10 Spin up Retry Count

194 Power temperatures

195 ECC on the Fly count

197 Current Pending Sector Count

198 Disconnection beyond repair

199 CRC cyclic redundancy check

200 Write Error Count



*Different manufacturers and different models have different attribute description , the user has no need to know exact meaning ,attribute detection values enough for them.*

## 3、 Threshold

It is specified by manufacturer calculated through a specific formula. If there is a attribute value lower than the threshold, which means HDD become unreliable and data stored is very easy to lose. Composition

and size of reliable attribute values is different for different HDD. It should be noted that, ATA standard only provides some SMART parameters; it does not provide a specific value. "Threshold" value is determined by manufacturers based on products' features. Thus, results tested by manufacturer provided detection software is very different from testing software under Windows (such as AIDA32)

#### **4、 Attribute Value**

Attribute value is the maximum normal value; the general range is from 1 to 253. Typically, the maximum attribute value is 100 (for IBM, Quantum, and Fujitsu) or 253 (for Samsung). Of course, there are some exceptions, for example, some models produced by Western Digital have two different attribute values, and property value is set 200 when initial production, but after then it is changed into 100.

#### **5、 Worst**

Worst value is the largest non-normal value in HDD's running. It is a value calculate for HDD's cumulative running, it is constantly refreshed according to running cycle, and very closed to the threshold. Whether the HDD is normal by S.M.A.R.T analysis is based on the comparison with threshold. The maximum value appear when new HDD start to use, which would continue to decrease with the everyday use or error happen. Consequently, larger attribute values mean better quality and higher reliability; smaller values mean more possibility of failure increases.

#### **6 、 Dates**

Actual values of HDD's detection items, many items are cumulative values.

#### **7、 Status**

It is current statues of HDD's every attribute after analyzing and comparing above attribute values by S.M.A.R.T, also is important information to judge HDD healthy or not.

There are three statuses: Normal, Alarm and Error----which is closely related with Pre-failure/advisory BIT.

## **9.5 Hard disk problem**

Use Detection Tool provided by the HDD manufacturer to detect the Function of HDD to solve data problem.

We recommend Seagate and Western Digital.

#### **How to detect Seagate HDD**

a) Get into [www.seagate.com](http://www.seagate.com), Click Support & Downloads →choose Sea Tools, download tool, as Diagram

### SeaTools for Windows

SeaTools for Windows tests SATA, USB, 1394, ATA (PATA/IDE) and SCSI drives. It installs onto your system. SeaTools for Windows is completely data safe. If the drive passes SeaTools for Windows, your troubleshooting can move to other areas.



[Go To Download](#)



[See the tutorial](#)





[Learn more](#)



SeaToolsfor  
WindowsSetu  
p-1205.exe

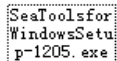


b) Double-click  to install downloaded file, click  installed file to detect the HDD information on PC.

c) Choose the HDD for detection (other manufacturer's hard disk suitable too).




### How to detect WDC HDD

a) Get into [www.wdc.com](http://www.wdc.com), choose WD support / download / SATA&SAS / WD Caviar / GP, download software as 错误！未找到引用源。

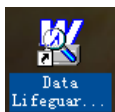

b) Click  to hard disk detection after downloading.

c) Double click hard desk in device list, as 错误！未找到引用源。:

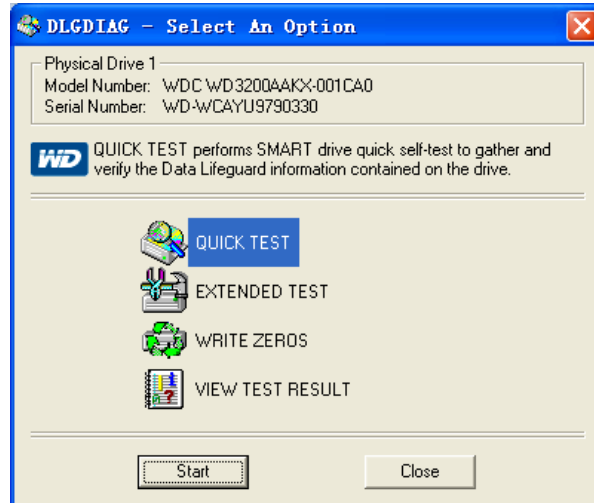

## 9.6 HDD Capacity Calculation

### Reference of HDD Capacity Calculation

The first time install DVR, please check if the HDD has installed.

### The capacity of the HDD

There is no limitation of capacity of single HDD to DVR, please choose the HDD according to the saving time.

### The choose of the Capacity

Computational formula of HDD Capacity:

Whole HDD Capacity = number of the channels  $\times$  time in need (hour)  $\times$  spent of HDD Capacity per hour (MB/hour)

Similarly we can have the formula of recording time:

$$\text{Recording time (hour)} = \frac{\text{Total HDD Capacity (MB)}}{\text{Capacity Occupation per Hour (MB/hr)} \times \text{Amount of Channel}}$$



1GB=1000MB, not 1GiB=1024MiB, so HDD capacity shown in Base Configuration under HDD Management less than real marked.

File size per hour (CBR).

Bit Rate	File	Bit Rate	File	Bit Rate	File
96k	42M	320k	140M	896k	393M
128k	56M	384k	168M	1.00M	450M
160k	70M	448k	196M	1.25M	562M
192k	84M	512k	225M	1.50M	675M

224k	98M	640k	281M	1.75M	787M
256k	112M	768k	337M	2.00M	900M

File size is more unpredictable when VBR style, please refer to the real size of recording file.

## 9.7 Terms

### Dual-stream

Dual-stream: one high bit rate stream for the local HD store, QCIF/CIF/2CIF/DCIF/4CIF coding, other low bit rate stream for network transmission, such as QCIF / CIF coding,

### I Frame

I frame: intra frame image, remove redundant information to compress the transmittal data, also called key frames.

### B Frame

B frame: According to time redundant of the source image sequence previously encoded frame and account the source image after the encoded frame to compress transmittal data, also known as bi-directional prediction frame.

### P Frame

P-frame: according to image frame lower than the previous time redundant to compress transmittal data, also called predicted frames.

### Wide Dynamic

Bright parts and dark parts in particular can be seen very clearly at the same time. Wide dynamic range is a ratio between the brightest luminance signal value and the darkest value.

### S. M. A. R. T

SMART (Self Monitoring, Analysis and Reporting Technology): now widely used in hard disk data security technology, monitoring system analysis Motor, circuit, HDD and disk head when HDD working, warn when abnormality, sometimes will automatically slow down and back up data.

### CVBS

Composite Video Broadcast Signal, consists of luminance and color signal from the composite baseband signal.

### BNC

Coaxial cable connector, composite video signals or audio signals, commonly use 75 ohm connectors. BNC welding and should pay attention to weld strength and remove burrs, or the signal wire and shield's contact will lead to a substantial attenuation of signal strength

## 9.8FAQ

### **DVR startup failure or continuously reboot**

Possible reasons:

1. The system has been damaged from a bad DVR update.
2. There is a problem with the DVR main board error, please contact supplier.
3. There is an HDD error. Replace faulty HDD.

### **Remote control does not work**

Possible reasons:

1. Check for batteries in remote control, especially positive and Negative.
2. Check for batteries' power.
3. Check if remote receiver is obscured.
- 3 Check if DVR address corresponds to the remote address.

### **DVR cannot control PTZ**

Possible reasons:

1. RS-485 cable connection error, A, B ports are inversely connected;
2. PTZ decoder, protocol, baud rate, address are incorrect;
3. Parallel connect a 120Ω resistance to resolve signal reflex caused by too many PTZs on the line.
4. The RS-485 on the DVR is defective

### **Blurred screen in preview mode**

Possible reasons:

Please make sure your cameras match your video format selected in the General menu. E.g. camera is NTSC standard but the DVR is PAL standard, the preview would be blurred.

### **Blurred screen in playback mode or failure to playback records**

Possible reasons:

1. Procedure error, reboot the DVR
2. HDD error, test or change out the HDD
3. DVR hardware failure, contact your local supplier

### **Fail to connect DVR through network**

Possible reasons:

- 1、 check the physical network connection is correct.
- 2、 check the DVR network configuration parameters.
- 3、 check whether IP conflicts exist in network.

### **Download records can't be played**

Possible reasons:

- 1 、 Player installation error.
- 2 、 The USB or HDD device has an error.
- 3 、 Do not install graphic software later than DX8.1.

### **Internet Explore Crash**

Possible reasons:

Close IE explore, enter into the tool bar

